

زیمبرگ



اَرّه عمودبر
۱۰۰ م م
۷۵۰ وات گیربکسی
مدل ۱۱۷۵



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 [zimberg.co](https://www.instagram.com/zimberg.co)

 info@zimbergco.com

 ٩...٨...٩

خدمات پس از فروش زیمبرگ



اصفهان

اردبیل

آذربایجان غربی

آذربایجان شرقی

خراسان جنوبی

چهارمحال و بختیاری

تهران

البرز

زنجان

خوزستان

خراسان شمالی

خراسان رضوی

قزوین

فارس

سیستان و بلوچستان

سمنان

کرمانشاه

کرمان

کردستان

قم

لرستان

گیلان

گلستان

کهگیلویه و بویراحمد

یزد

همدان

مرکزی

مازندران

برای اطلاع از آدرس و شماره تماس دفاتر خدمات شهرستانها، به وب سایت شرکت (ZIMBERGCO.COM) مراجعه نموده و یا با شماره سراسری و رایگان ۹۰۰۰۸۰۰۹ تماس بگیرید.

[ZIMBERG]

فهرست مطالب

۳	قوانین ایمنی عمومی
۵	دیگر قوانین
۵	نصب و تعویض تیغه
۵	پایه قرقره
۵	عملکرد دکمه سوئیچ
۶	عملکرد
۶	برش بدون لبه اضافه
۶	برش فلز
۷	خط کش راهنما
۷	نگهداری
۸	نقشه انفجاری
۹	مشخصات دستگاه
۹	جدول لیست قطعات

قوانین ایمنی عمومی

▲ در زمان استفاده از ابزار برقی، به منظور کاهش خطر آتش سوزی، برق گرفتگی و جراحات فردی، همواره باید از اقدامات احتیاطی و نکات ایمنی پیروی کرد.

۱. محل کار باید تمیز و به اندازه کافی روشن باشد، مکان های تاریک و نامرتب می تواند حادثه آفرین باشد.

۲. فضای محیط کار را بررسی نمایید، ابزار برقی را در معرض باران قرار ندهید. از استفاده ابزار برقی در مکان های دارای مایعات، گاز ها و یا گرد و غبار قابل اشتعال، اجتناب کنید.

۳. در زمان استفاده از ابزار برقی، کودکان را دور نگه دارید، اجازه ندهید که ناظران، با ابزار و یا سیم ربط در تماس باشند. تمامی آنها باید از محیط کار دور نگه داشته شوند.

۴. زمانیکه از ابزار برقی استفاده نمی کنید، باید آنها را در مکان های خشک، مرتفع و دور از دسترس کودکان نگهداری کنید.

۵. به ابزارهای برقی فشار وارد نکنید. بر اساس کاربردهای در نظر گرفته شده برای هر ابزار برقی، از ابزار مناسب استفاده کنید. انتخاب ابزاری که به درستی طراحی شده باعث انجام کار به صورت کار اتر و سریعتر می شود.

۶. از ابزار مناسب استفاده کنید. از وارد آوردن فشار به ابزار کوچک و متعلقات، برای انجام کار سنگین و استفاده از آنها به منظور انجام کاری که برای آن طراحی نشده اند، اجتناب کنید.

۷. لباس کار مناسب بپوشید. از پوشیدن لباس گشاد و استفاده از زیور آلات در حین انجام کار اجتناب کنید. موها، لباس و دستکش خود را دور از قسمت های متحرک ابزار نگه دارید، در صورت داشتن موهای بلند از پوشش محافظ مو استفاده کنید.

۸. از عینک ایمنی استفاده کنید، در زمانی که انجام کار با تولید گرد و غبار همراه است، از ماسک صورت و یا ماسک ضد گرد و غبار استفاده نمایید.

۹. از کابل دستگاه استفاده نامناسب نکنید. از به کار بردن کابل، برای حمل دستگاه و یا کشیدن دو شاخه از پریز اجتناب کنید و آن را دور از حرارت، روغن و لبه های تیز نگه دارید.

۱۰. از ابزار برقی، فقط برای انجام مواردی استفاده نمایید که در دفترچه راهنما مشخص شده است.

۱۱. بدن خود را بیش از حد نکشید، همواره به جای پا و وضعیت تعادل خود توجه داشته باشید و در وضعیت مناسب و متعادل قرار گیرید،

۱۲. با دقت از ابزار نگهداری کنید. برای عملکرد ایمن تر و بهتر، ابزار را تمیز و تمیز نگه دارید، برای انجام روغنکاری و تعویض لوازم جانبی از دستور العمل ها پیروی کنید. به طور دوره ای کابل ها را بررسی کرده و در صورت آسیب دیدگی، آنها را برای تعمیر به مراکز خدمات مجاز تحویل دهید. سیم های رابط را نیز به طور مرتب بررسی کرده و در صورت آسیب دیدن، آنها را تعویض کنید. دسته ها را نیز خشک، تمیز و بدون روغن و گریس نگهداری کنید.

۱۳. زمانیکه از دستگاه استفاده نمی کنید و یا قبل از سرویس آن، در هنگام تعویض متعلقات، تیغه ها، مته ها، کاترها و دیگر لوازم، کابل را از دوشاخه خارج کنید.

۱۴. قبل از روشن کردن دستگاه، هرگونه آچار و یا وسیله تنظیم کننده را از دستگاه جدا نمایید.

۱۵. از شروع به کار غیر منتظره دستگاه اجتناب کنید. از حمل کردن آن در حالیکه به پریز متصل است و انگشتان روی دکمه سوئیچ قرار دارد اکیدا پرهیز کنید، در زمان اتصال کابل به پریز، اطمینان حاصل کنید که دکمه سوئیچ بر روی وضعیت OFF قرار دارد.

۱۶. از کابل واسط استفاده نمایید. زمانیکه از دستگاه در خارج از منزل استفاده می کنید، فقط از کابل های واسطی استفاده کنید که به این منظور طراحی شده اند.

۱۷. محتاط باشید، در هنگام استفاده از ابزار مراقب نحوه انجام کار باشید، در صورت خستگی، هرگز از دستگاه استفاده نکنید.

۱۸. قطعات آسیب دیده را بررسی کنید. پیش از استفاده مجدد از دستگاه، محافظ و قطعه ی دیگری که آسیب دیده است باید به دقت بررسی شود تا مشخص گردد که می تواند به درستی کار کند و عملکردی که برای آن طراحی شده است را انجام دهد. دستگاه را از نظر تنظیم نبودن قطعات متحرک، خم شدن و یا شکستگی آنها و یا هر شرایطی که ممکن است بر روس عملکرد ابزار تاثیر بگذارد، بررسی کنید. چنانچه قطعه ای آسیب دیده است باید توسط یک مرکز خدمات مجاز تعمیر شده و یا تعویض گردد. دکمه سوئیچ معیوب را توسط مرکز خدمات مجاز، تعویض کنید. در صورتیکه سوئیچ قادر به روشن / خاموش کردن دستگاه نمی باشد، از به کار گرفتن آن دستگاه اجتناب کنید.

۱۹. به هنگام استفاده از ابزار، از لمس فلزاتی مانند لوله ها، رادیاتور، فریزر و ... که بر روی سطح زمین قرار گرفته اند، اجتناب کنید.

۲۰. قطعات را تعویض کنید. قطعاتی را انتخاب کنید که توسط تولید کننده مشخص شده اند و آنها را به وسیله مراکز ویژه تعمیرات، تعویض کنید.

به ولتاژ منبع تامین قدرت، توجه کنید. اطمینان حاصل کنید که ولتاژ آن دقیقاً برابر ولتاژی است که بر روی لیبل دستگاه مشخص شده است. در صورتیکه ولتاژ، بالاتر از حد تعیین شده باشد، علاوه بر خرابی خود دستگاه، حوادث مهیبی برای کاربر رخ خواهد داد. بنابراین هرگز پیش از اطمینان از ولتاژ منبع قدرت، کابل را به پریز وصل نکنید. از طرفی دیگر، چنانچه ولتاژ منبع قدرت از ولتاژ مورد نیاز پایین تر باشد، برای موتور مضر خواهد بود.

دیگر قوانین ایمنی

۱. از برش لوله تو خالی اجتناب کنید.
۲. از برش قطعه ای که بیش از اندازه بزرگ است، پرهیز نمایید.
۳. ابزار را محکم نگه دارید.
۴. دستان خود را دور از قطعات متحرک نگه دارید.
۵. در زمان انجام برش بر روی دیوارها، کف و یا هر مکانی که ممکن است (سیم های الکتریکی حامل جریان برق) وجود داشته باشند، هیچ قطعه فلزی از ابزار را لمس نکنید. برای خودداری از برق گرفتگی در صورت برش یک سیم حامل جریان برق، ابزار را فقط با استفاده از سطوح عایق آن، نگه دارید.
۶. از لمس کردن تیغه و یا ابزاری که بر روی آن کار می کنید، بلافاصله پس از اتمام کار، اجتناب کنید، زیرا ممکن است بیش از حد داغ شده باشند و می توانند پوست را بسوزانند.

نصب و تعویض تیغه اره

برای نصب، پیچ تعبیه شده بر روی نگهدارنده تیغه را با استفاده از یک آچار شش گوش شل کرده، دندانه تیغه را رو به جلو قرار داده و تا جای ممکن آن را وارد نگهدارنده تیغه کنید، اطمینان حاصل کنید که لبه عقبی تیغه به خوبی درون غلطک قرار گرفته است سپس برای محکم کردن آن، پیچ را محکم کنید.

برای جداسازی تیغه، مراحل نصب را به طور برعکس اجرا نمایید.

پایه قرقره :

با استفاده از یک آچار شش گوش، پیچ قرار گرفته در پشت پایه دستگاه را شل کنید، گیره را برداشته تا غلطک به آرامی با تیغه تماس پیدا کند، سپس برای محکم کردن پایه و گیره، پیچ را مجدداً محکم بنیدید.

توجه:

گاهی غلطک را روغنکاری کنید.

عملکرد دکمه سوئیچ:

برای شروع به کار دستگاه، شاسی سوئیچ را فشار دهید و برای متوقف کردن آن، شاسی را رها کنید. برای استفاده از عملکرد پیوسته، دکمه سوئیچ و سپس دکمه قفل کن را فشار دهید.

برای خروج از حالت قفل، شاسی را به طور کامل فشار داده و سپس آن را آزاد کنید.

عملکرد

همواره پایه ابزار را در حالت تراز با قطعه ای که بر روی آن کار می کنید، نگه دارید. رعایت نکردن این اصل، ممکن است سبب شکستن تیغه و یا منجر به آسیب جدی شود. دستگاه را روشن کرده و منتظر شوید تا سرعت تیغه به حداکثر برسد، سپس سطح پایه تیغه را بر روی سطح مورد نظر قرار داده و به آرامی آن را در امتداد خط برشی که از قبل مشخص کرده اید به سمت جلو هدایت کنید، در زمان برش منحنی ها، ابزار را به آرامی پیش ببرید.

برش های دقیق و مستقیم

پیچ قرار گرفته در قسمت پشت دستگاه را با استفاده از آچار شش گوش، شل کرده، پایه دستگاه را تا جای ممکن به سمت عقب کشیده، پیچ را محکم کرده تا پایه مجدداً محکم شود.

برش های سوراخی می توانند توسط مورد اول و یا دوم ایجاد شوند:

۱. ایجاد حفره ابتدایی. برای ایجاد حفره داخلی، بدون برش متصل به یک لبه، یک حفره با قطر ۱۲ میلی متر و یا بیشتر را از قبل ایجاد کرده، تیغه را درون این حفره وارد کرده تا برش مورد نظرتان را آغاز کنید.

۲. برش ناگهانی، در صورتیکه با دقت مراحل زیر را انجام دهید دیگر نیازی به ایجاد حفره ابتدایی و یا برش متصل به لبه نخواهد بود:

۳. دستگاه را، در حالیکه تیغه آن نزدیک به سطح قطعه ای که می خواهید بر روی آن کار کنید قرار گرفته است، بر روی لبه جلویی پایه خم کنید.

۴. فشاری را به دستگاه وارد کنید تا اینکه در زمان روشن کردن آن، لبه جلویی پایه حرکت نکند و به آرامی قسمت انتهایی ابزار را پایین ببرید.

۵. همانطور که تیغه، قطعه مورد نظر را سوراخ می کند، به آرامی دستگاه را بر روی سطح کار، پایین ببرید.

۶. برش را به شیوه ی طبیعی، تکمیل کنید.

برش های بدون لبه های اضافه

برای تراشیدن و مرتب کردن لبه ها و یا ایجاد تنظیمات ابعاد، تیغه را به آرامی در طول لبه های برش حرکت دهید.

برش فلز

همواره در زمان برش فلز، از یک روغن برش مناسب استفاده نمایید. عدم انجام این کار موجب آسیب دیدن تیغه می شود. می توان در عوض استفاده کردن از روغن برش، سطح زیرین قطعه مورد نظر را نیز گریس کاری کرد.

استفاده از گونیا اندازه گیری در برش ها :

احتیاط

پیش از نصب و یا تعویض لوازم جانبی، همواره اطمینان حاصل کنید که ابزار خاموش بوده و به پریز متصل نمی باشد.

۱. برش های ابتدایی

زمانیکه به طور مکرر برش هایی به عرض ۱۶۰ میلی متر و یا کمتر ایجاد می کنید، از خط کش راهنما ۱ استفاده کنید. برای نصب آن، خط کش را درون حفره قرار گرفته در کنار پایه دستگاه، وارد کنید، خط کش راهنما را به سمت عرض برش دلخواه کشیده و سپس پیچ را محکم کنید.

۲. برش های منحنی


خط کش راهنما ۲ را در حفره تعبیه شده بر روی پایه ابزار وارد نمایید، بین محور راهنما را درون حفره ی روی خط کش راهنما وارد کنید، دسته را بر روی پین، پیچ کنید تا خط کش بر روی شعاع برش دلخواه محکم شود، پیچ را محکم کرده تا خط کش کاملاً در جایش بدون حرکت باشد، سپس پایه دستگاه را تا جای ممکن به سمت جلو حرکت دهید.

نگهداری


تعویض ذغال ها

◀ ذغال ها را به طور مرتب بررسی کرده و تعویض نمایید، زمانیکه محدوده سایش به حد بیرونی مشخص شده برای ساییدگی میرسد، تعویض ذغال ها ضروری است. هر دو ذغال باید به صورت همزمان تعویض شوند.

◀ پیش از هرگونه اقدام برای بررسی و یا نگهداری، همواره اطمینان حاصل کنید که دستگاه خاموش بوده و دوشاخه به پریز متصل نمی باشد.

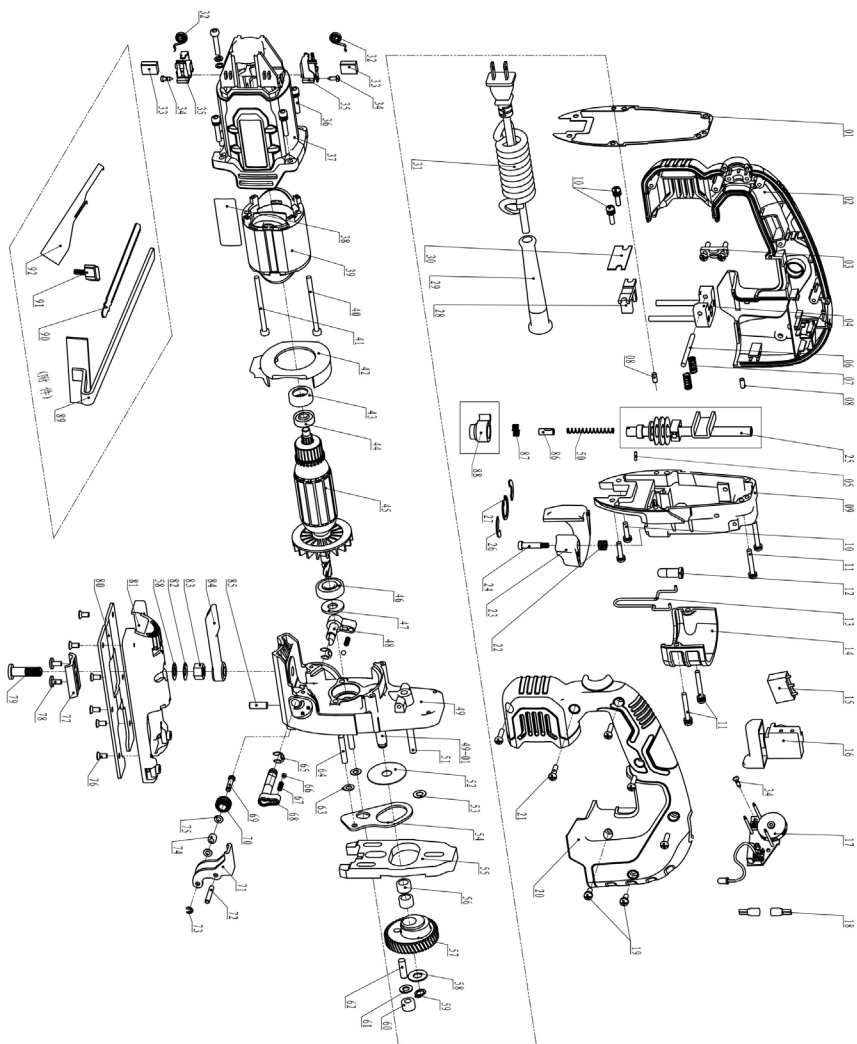

نقشه انفجاری دستگاه

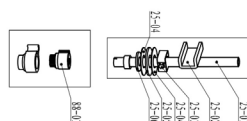

مشخصات فنی دستگاه	
مدل	PZJ-1175
قدرت	۷۵۰ وات
سرعت حرکت در حالت آزاد	۳۰۰۰ دور در دقیقه
حرکت عمودی تیغه	۲۶ میلی لیتر
حداکثر عمق برش	چوب: ۱۰۰ م.م، استیل: ۱۰ م.م
وزن	۳.۲ کیلوگرم

جدول لیست قطعات

ردیف	شرح قطعه	۱۵	UF۳۳/۰ نویزگیر	ست تیغگیر
۰۱	واشر کاغذی گیربکس	۱۶	کلید	۲۶ واشر نیم دنده
۰۲	پوسته چپ	۱۷	دیمر	۲۷ Ø۲۱ خار رینگ
۰۳	بست کابل	۱۸	سلف	۲۸ بلوک
۰۴	نگهدارنده	۱۹	۱۰×M۴ پیچ	۲۹ ته کابل
۰۵	۸×Ø۲ پین	۲۰	دسته کلید راست	۳۰ واشر
۰۶	Ø۴X۴۹ پین	۲۱	۱۶×ST۴/۲ پیچ	۳۱ کابل
۰۷	۱۵×Ø۶×Ø۰/۶ فنر	۲۲	فنر	۳۲ فنر جا ذغالی
۰۸	۱۰×Ø۴ پین قفل کن	۲۳	اهرم قفل کن تیغ	۳۳ زغال
۰۹	درب گیربکس	۲۴	M۴ پیچ	۳۴ ۸×ST۲/۹ پیچ
۱۰	M۴X۱۴ پیچ	۲۵	ست تیغگیر	۳۵ جا ذغالی
۱۱	M۴X۲۸ پیچ	۱-۲۵	ست تیغگیر	۳۶ M۴X۲۲ پیچ
۱۲	کاور لامپ	۲-۲۵	ست تیغگیر	۳۷ پوسته بالشتک
۱۳	فنر استیل تراز یاب	۳-۲۵	ست تیغگیر	۳۸ لیلل راست
۱۴	گارد شیشه ای	۴-۲۵	ست تیغگیر	۳۹ بالشتک
		۵-۲۵	ست تیغگیر	۴۰ ۶×ST۴/۲ پیچ
				۴۱ ۵۸×ST۴/۲ پیچ
				۴۲ گردگیر

۲/۵*M۸ پیچ	۷۹	HK۰۶۱۲۰۸	۶۰	لاستیک ته	۴۳
درب کفی	۸۰	رولبرینگ		بلبرینگ ۶۰۷	۴۴
دستگاه		۱×۰۶/۲X۱۲	۶۱	آرمیچر	۴۵
کفی دستگاه	۸۱	۱۸/۷×۰۶	۶۲	بلبرینگ ۶۰۰۰	۴۶
فنر قفل کن کفی	۸۲	۰/۵×۱۰×۰۵/۲	۶۳	۱/۵×۲۱×۰۸	۴۷
مهره ۲/۵*M۸	۸۳	واشر		نمدی	
اهرم قفل کن	۸۴	۲۸×۰۵	۶۴	کلید تغییر حالت	۴۸
کفی		کن		پین	۴۸-۰۱
پین	۸۵	۰۶ خار کشویی	۶۵	گیربکس	۴۹
نگهدارنده فنر	۸۶	۰۴ ساچمه	۶۶	پین گیربکس	۴۹-۰۱
تیغگیر		۹/۵×۰۳/۵×۰۴۵	۶۷	دنده	
فنر تیغگیر	۸۷	فنر		فنر قفل کن	۵۰
ست کامل	۸۸	کلید بلوور	۶۸	تیغگیر	
تیغگیر		۲۰/۵×۰۴/۱	۶۹	۲۸×۰۶	۵۱
ست کامل	۸۸-	قرقره		بالانس	
تیغگیر	۰۱	۱۱×۰۱۴×۰۸	۷۰		۵۲
گونیا	۸۹	پایه قرقره	۷۱	۰/۵×۰۳۶/۵×۰۹/۲	
تیغ	۹۰	پین نگهدارنده	۷۲	واشر	
پیچ کفی	۹۱	پایه قرقره		۰/۵×۰۱۲×۰۶/۲	۵۳
دمنده	۹۲	خار کشویی	۷۳	واشر	
		HK۰۴۰۸	۷۴	واشر پشت صفحه	۵۴
		رولبرینگ		لنگ	
		۰/۵×۸/۵×۰۴/۲	۷۵	صفحه لنگ	۵۵
		واشر		HK۰۹۰۸۱۳	۵۶
		۸*M۴ پیچ	۷۶	رولبرینگ	
		بست پلیت	۷۷	دنده مقابل	۵۷
		۶*M۴ پیچ	۷۸	۰/۸×۰۱۷×۰۸/۲	۵۸
				واشر	

39	stator
40	60×screw ST4.2
41	58×screw ST4.2
42	Baffle ring
43	bearing sleeve
44	607 bearing
45	rotor
46	6000 bearing
47	wool pad 1.5×21×Ø8
48	knob
-48 01	Pin
49	gear box
-49 01	Locating pin for gear
50	locating pin spring
51	balance block pin 28×Ø6
52	washer 0.5×Ø36.5×Ø9.2
53	washer 0.5×Ø12×Ø6.2
54	Carry knife plate
55	balance block
56	Needle bearing HK090813
57	gear

58	washer 0.8×Ø17×Ø8.2
59	Baffle ring Ø8
60	needle bearing HK061208
61	washer 1×Ø6.2×12
62	18.7×pin Ø6
63	washer 0.5×10×Ø5.2
64	balance block Locating pin 28×Ø5
65	Split washer Ø6
66	Ball Ø4
67	spring 9.5×Ø3.5×Ø0.45
68	Switch for Blower
69	guide wheel pin 20.5×Ø4.1
70	guide wheel 11×Ø14×Ø8
71	pendulum Support
72	Pin for support of guide wheel
73	Baffle ring
74	Needle bearing HK0408
75	washer 0.5×8.5×Ø4.2


76	8*Screw M4
77	pressing plate
78	6*Screw M4
79	2.5*Screw M8
80	Metal base cover
81	Alu base
82	Butterfly spring
83	2.5*Nut M8
84	quick release knob for base
85	pendulum pin
86	locating sleeve for blade
87	recip lever spring
88	lock sleeve sets
-88 01	lock sleeve
89	guide
90	wood blade
91	Clamp for rip guide
92	cleaner

Specifications	
Model	PZJ-1175
Power	750 W
No-Load speed	3000 RPM
Stroke length	25 mm
Max cutting depth	wood: 100mm, steel: 10mm
Weight	3.2 kg


Part List

No.	Description
01	seal paper
02	left handle
03	power cord pressure
04	Support
05	8×Pin Ø2
06	Slideway pin Ø4X49
07	Offsetting spring 15×Ø6×Ø0.6
08	Locating pin 10×Ø4
09	gear box cover
10	screw M4X14
11	screw M4X28
12	PC light cover
13	Safety steel lever
14	front cover
15	0.33UF Capacitors
16	Switch
17	Speed controller
18	inductance
19	10×screw M4
20	right handle
21	16*screw ST4.2
22	spring

23	transparant cover
24	Screw M4
25	reciprocating lever sets
1-25	recip lever
2-25	slideway
3-25	slideway block
4-25	washer 0.5×26×Ø12
5-25	wool pad 2×25×Ø8.5
6-25	seal ring 1.8×Ø18×Ø8.2
26	half-circular washer
27	Baffle ring Ø21
28	pressure block
29	power sleeve
30	washer
31	power cord
32	spring
33	carbon brushes
34	8×screw ST2.9
35	carbon brushes holder
36	screw M4X22
37	housing
38	rating label

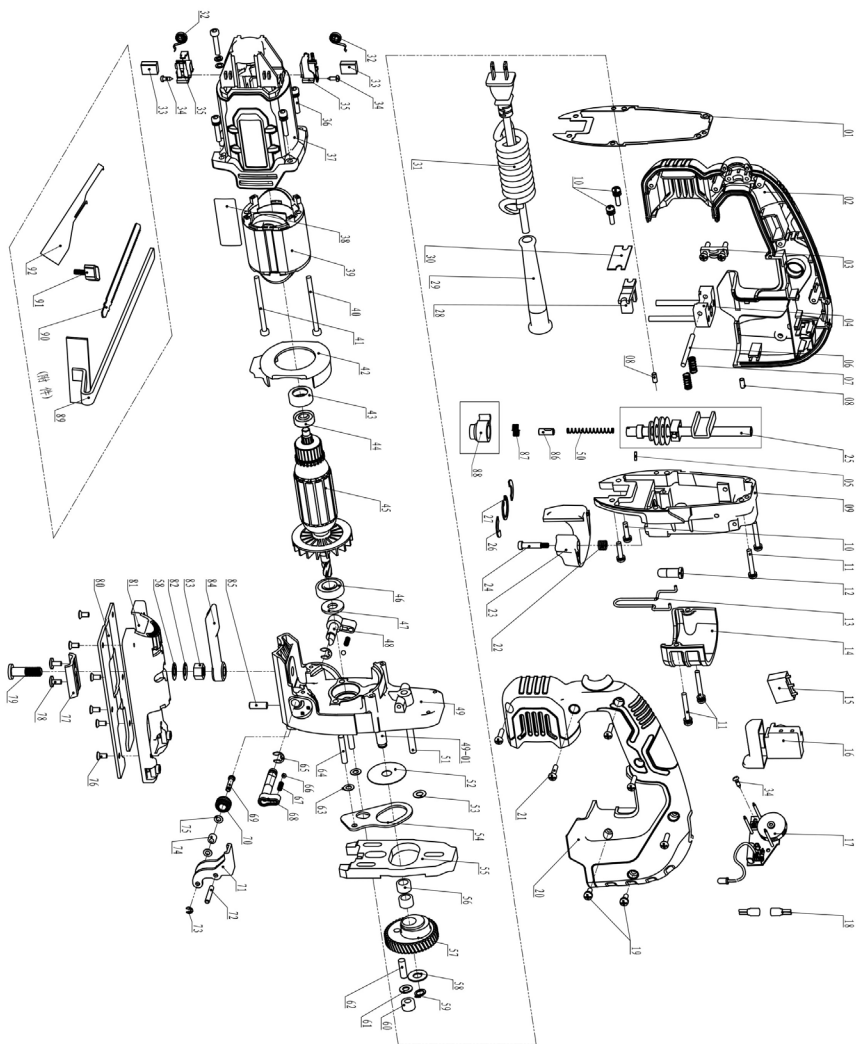

Explosion Map

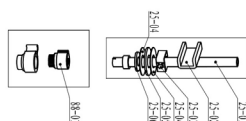

Guide ruler:

Caution

Always be sure that the tool is switched off and unplugged before installing or removing accessories.

1.Starting cuts

When repeatedly cutting widths of 160 mm or less, use of the guide ruler I.

To install, insert the guide ruler into the hole on the side of the tool base, slide the guide ruler to the desired cutting width position, then tighten the bolt to secure it.

2.Circular cuts

Insert the guide ruler II into the hole on the tool base, insert the circular guide pin through the hole on the guide ruler II, screw the knob onto the pin to secure the guide ruler II to the desired cutting radius, and tighten the bolt to secure it in place, then move the tool base all the way forward.

Maintenance

Replace the carbon brush

- ▶ Replace and check the carbon brush regularly, when the area of abrasion reached the outer limit abrasive mark, replacement is necessary, the two brushes are to be replaced at the same time.

- ▶ Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.

Operation

Always hold the tool base flush with the work piece, failure to do so may cause blade breakage, resulting in a serious injury.

Turn the tool on and wait until the blade attains full speed, then rest the tool base flat on the work piece and gently move the tool forward along the previously marked cutting line, when cutting curves, advance the tool very slowly.

Front flush cuts

Loosen the bolt on the back of the tool base with the hex wrench, then move the tool base all the way back, then tighten the bolt to secure the tool base.

Cutouts can be made with either of I or II:

► Boring a start hole. For internal cutouts without a lead-in cut from an edge, pre-drill a starting hole 12 mm or more in diameter, insert the blade into this hole to start your cut.

► Plunge cutting, you need not bore a starting hole or make a lead-in cut if you carefully do so follows:

1. Tilt the tool up on the front edge of the base with the blade positioned just about the work piece surface.
2. Apply pressure to the tool so that the front edge of the base will not move when you switch on the tool and gently lower the back end of the tool slowly.
3. As the blade pierces the work piece, slowly lower the base of the tool down onto the work piece surface.
4. Complete the cut in the normal manner.

Finishing edges

To trim edges or make dimensional adjustments, run the blade lightly along the cut edges.

Metal cutting

Always use a suitable coolant (cutting oil) when cutting metal, failure to do so will cause blade wear, the underside of the work piece can be greased instead of using a coolant.

Additional safety rules

1. Do not cut hollow pipe
2. Do not cut oversize work piece
3. Hold the tool firmly.
4. Keep hands away from moving parts
5. When cutting through walls, floors or wherever "live electric wires may be encountered. Do not touch any metal parts of the tool, hold the tool only by the insulated grasping surface to prevent electric shock if you cut through a "live" wire.
6. Do not touch the blade or the work piece immediately after operation, they may be extremely hot and could burn your skin.

Install and remove the saw blade

Loosen the bolt on the blade holder with the hex wrench to install the blade, with the blade teeth facing forward, insert the blade into the blade holder as far as it will go, make sure that the back edge of the blade fits into the roller, then tighten the bolt to secure the blade.

To remove the blade, follow the installation procedures in reverse.

Adjusting roller:

Loosen the bolt³ on the back of the tool base with the hex wrench, move the retainer so that the roller contacts the blade lightly then tighten the bolt to secure the tool base and the retainer.

Note:

Lubricate the roller occasionally.

Switch action:

Pull the switch trigger to start the tool, release the trigger to stop, for continuous operation, pull the trigger and then push in the lock button.

To stop the tool from the locked position, pull the trigger fully, then release it.

13. Unplug power cord. When not in use, before servicing when changing attachments, blades, bits, cutters, etc. unplug power cord.'

14. Remove adjusting keys and wrenches. From habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.

15. Avoid unintentional starting. Do not carry plugged in tool with finger on switch. Make sure switch is off when plugging in.

16. Use extension cord. When tool is used outdoors, use only extension cords intended for outdoors use.

17. Stay alert. Watch what you are doing. Use common sense. Do not operate tool when you are tired.

18. Check damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for misalignment of moving parts, binding of moving parts, break age of parts, mounting and any other conditions that may affect its operations. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in the instruction manual. Have defective switch replaced by authorized service center. Do not use tool if switch does not turn it on and off.

19. Avoid electric shock. When you are operating tool, do not touch metal being grounded, such as pipe, radiator, freezer etc.

20. Replace parts. Choose the parts specified by the manufacturer and have them replaced by the special repairing center.

Mind the voltage of the power supply: make sure the voltage of the power supply is the same as that indicated on the board of the tool. When the former is higher than the later, grave accidents would happen to the user, as well as ruin to the tool itself. There for never plug in before confirm the voltage of the power supply. On the other side, if the former is lower than latter, it will be harmful to the engine.

General safety rules

⚠ Warning: when using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following.

1. Keep work area clean. Cluttered areas and benches invite accidents.
2. Consider work area environment. Do not expose power tools to rain. Do not use power tools presence of flammable liquid or bases.
3. Keep children away. Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.
4. Store idle tools. When not in use, tools should be stored in dry and high or locked-up place out of reach of children.
5. Do not force tool. It will do the job better and safer at the rate for which it was intended.
6. Use right tool. Do not force small tool or attachment to do the job of a heavy-duty tool. Do not use tool for purpose not intended.
7. Wear proper apparel. No loose clothing or jewelry to get caught in moving parts. Wear protecting hair covering to contain long hair.
8. Use safety glasses. Use face or dust mask when cutting operation is dusty.
9. Do not abuse the cord. Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil and sharp edges.
10. Use the power tools only for applications specified in the handing instructions.
11. Do not over reach. Keep proper footing and balance at all times.
12. Maintenance tools with care. Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service center. Inspect extension cords periodically and replace of damaged. Keep handles dry, clean and free from oil and grease.

List

General safety rules	3
Additional safety rules	5
Install and remove the saw blade	5
Adjusting roller	5
Switch action	5
Operation	6
Finishing edges	6
Metal cutting	6
Guide ruler	7
Maintenance	7
Explosion Map	8
Technical data	9
Part list	9

Zimberg After Sales Service



East Azerbaijan	West Azerbaijan	Ardabil	Isfahan
Alborz	Tehran	Chaharmahal and Bakhtiari	South Khorasan
Razavi Khorasan	North Khorasan	Khuzestan	Zanzan
Semnan	Sistan and Baluchestan	Fars	Ghazvin
Ghom	Kordestan	Kerman	Kermanshah
Kohgiluyeh and Boyer-Ahmad	Golestan	Gilan	Lorestan
Mazandaran	Markazi	Hamedan	Yazd

For more information about the contact details and address of the company's Authorized Service Centers, please visit our website ZIMBERGCO.COM or call free telephone No.90008009

[ZIMBERG]



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 [zimberg.co](https://www.instagram.com/zimberg.co)

 info@zimbergco.com

 90008009

[ZIMBERG]



**Jigsaw
750W**

PZJ-1175