

زیمبرگ



سنباده لرزان
۲۶۰ وات
مدل ۵۳۲۶



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 zimberg.co

 info@zimbergco.com

 ٩...٨...٩

خدمات پس از فروش زیمبرگ



اصفهان

اردبیل

آذربایجان غربی

آذربایجان شرقی

خراسان جنوبی

چهارمحال و بختیاری

تهران

البرز

زنجان

خوزستان

خراسان شمالی

خراسان رضوی

قزوین

فارس

سیستان و بلوچستان

سمنان

کرمانشاه

کرمان

کردستان

قم

لرستان

گیلان

گلستان

کهگیلویه و بویراحمد

یزد

همدان

مرکزی

مازندران

برای اطلاع از آدرس و شماره تماس دفاتر خدمات شهرستانها، به وب سایت شرکت (ZIMBERGCO.COM) مراجعه نموده و یا با شماره سراسری و رایگان ۹۰۰۰۸۰۰۹ تماس بگیرید.

[ZIMBERG]

فهرست مطالب

۳	ایمنی عمومی
۵	استفاده و مراقبت از دستگاه
۶	سرویس
۶	هشدارهای ایمنی
۷	مشخصات محصول
۷	مونتاز
۹	نگهداری و سرویس
۱۰	مشخصات فنی
۱۱	نقشه انفجاری
۱۲	جدول لیست قطعات

لطفا پیش از استفاده از این دستگاه، دفترچه راهنما را به دقت مطالعه نمایید.

قوانین ایمنی عمومی

هشدار!

تمامی دستورالعمل ها را به دقت مطالعه نمایید. عدم به کار گیری دستورات ذکر شده در این دفترچه، ممکن است منجر به برق گرفتگی، آتش سوزی و یا جراحات جدی شود. تمام این دستورات را نزد خود حفظ کنید.

محل کار

- محل کار باید تمیز و به اندازه کافی روشن باشد، مکان های تاریک و نامرتب می تواند حادثه آفرین باشد.
- از ابزار برقی در مکان های قابل اشتعال و انفجار ، از جمله در حضور مایعات، گازها و یا گرد و غبار قابل اشتعال استفاده نکنید. ابزارهای برقی جرقه هایی تولید می کنند که ممکن است باعث مشتعل شدن گازها و یا گرد و غبار شود.
- در زمان استفاده از ابزار برقی، کودکان را دور نگه دارید، از دست دادن تمرکز و پرت شدن حواس می تواند منجر به از دست دادن کنترل دستگاه شود.

ایمنی الکتریکی

- از تماس بدنی با سطوحی مانند لوله ها، رادیاتورها، یخچال و فریزر پرهیز کنید، در صورت تماس با این سطوح خطر شوک الکتریکی افزایش می یابد.
- هرگز ابزار برقی را در معرض باران و یا در محیط های نمناک قرار ندهید، زیرا نفوذ آب به دستگاه، خطر برق گرفتگی را افزایش می دهد.
- از کابل استفاده نامناسب نکنید. از حمل دستگاه و یا کشیدن دوشاخه از پریز، با استفاده از کابل آن، اجتناب کنید. همواره کابل را دور از حرارت، روغن و یا لبه های تیز نگهداری کنید. کابل های آسیب دیده را سریعاً تعویض نمایید زیرا خطر برق گرفتگی را افزایش می دهند.
- در هنگام استفاده از یک ابزار برقی در خارج از منزل، از یک سیم واسط

علامتگذاری شده به صورت «W-A» و یا «W» و مناسب با فضای باز استفاده کنید تا خطر را کاهش دهد.

ایمنی شخصی

■ محتاط باشید، در هنگام استفاده از ابزار مراقب نحوه انجام کار بوده و در صورتیکه خسته هستید هرگز از ابزار برقی استفاده نکنید. یک لحظه غفلت در زمان استفاده از ابزار برقی می تواند منجر به بروز صدمات جدی شود.

■ از لباس کار مناسب استفاده نمایید. از پوشیدن لباس های گشاد و یا استفاده از جواهرات اجتناب کنید، مو، لباس ها و دستکش خود را دور از قطعات متحرک نگه دارید زیرا لباس های گشاد، موی بلند و جواهرات ممکن است به این قطعات گیر کند. در زمان کار در خارج از منزل از دستکش های پلاستیکی و کفش های ایمنی استفاده کرده و برای پوشاندن موهای بلند از پوشش موی مناسب استفاده نمایید.

■ از شروع به کار غیر منتظره دستگاه اجتناب کنید. در زمان اتصال دوشاخه به پریز، اطمینان یابید که دکمه سوئیچ بر روی وضعیت خاموش است. هرگز دستگاه را در صورتیکه دوشاخه به پریز متصل بوده و یا انگشتتان بر روی دکمه سوئیچ است، حمل نکنید.

■ پیش از روشن کردن دستگاه، همواره اطمینان یابید که آچارها و یا هر وسیله تنظیم کننده دیگری از دستگاه جدا شده باشد. زیرا باقی ماندن آچار بر روی یک قطعه چرخان دستگاه، می تواند سبب بروز آسیب های جدی گردد.

■ بدن خود را بیش از حد نکشید. همواره جای پای خود را محکم کرده و تعادل را حفظ کنید، زیرا در این صورت قادر به کنترل بهتر دستگاه در شرایط غیر منتظره خواهید بود.

■ از عینک و تجهیزات ایمنی استفاده نمایید. با توجه به شرایط موجود، باید از تجهیزاتی نظیر ماسک ضد گرد و غبار، کفش های ایمنی ضد لغزش، کلاه ایمنی و محافظ گوش استفاده شود. عینک های معمولی و یا عینک آفتابی قادر به محافظت از چشم نیستند.

استفاده و مراقبت از دستگاه

- از بست، گیره و یا دیگر راه های عملی برای ثابت نگهداشتن قطعه بر روی یک سطح ثابت استفاده نمایید. نگه داشتن قطعه که بر روی آن کار میکنید با دست و یا در مقابل بدنتان، بی ثبات بوده و ممکن است منجر به از دست دادن کنترل شود.
- از وارد کردن فشار به دستگاه اجتناب نموده و برای کار خود از دستگاه مناسب استفاده نمایید. زیرا در صورتی کار بهتر و ایمن تر انجام می گیرد که از دستگاه به همان منظوری استفاده شود که برای آن طراحی شده است.
- اگر دکمه سوئیچ قادر به روشن و خاموش کردن ابزار نیست از وسیله استفاده نکنید. هر ابزار برقی که نمی تواند با دکمه سوئیچ کنترل شود خطرناک است.
- قبل از انجام هرگونه تنظیم و یا تغییر لوازم جانبی، دوشاخه را از پریز خارج کنید. این اقدامات ایمنی پیشگیرانه خطر شروع به کار اتفاقی ابزار را کاهش می دهد.
- ابزار بلا استفاده را دور از دسترس کودکان نگه دارید و اجازه ندهید که افراد ناآشنا به ابزار و این دستورالعمل ها ، از آن استفاده کنند. ابزار برقی برای کاربران آموزش ندیده خطرناک هستند.
- در حفظ و نگهداری ابزار کوشا باشید. ابزار برشی را تیز و تمیز نگه دارید. ابزار برشی با لبه های تیز که به درستی از آنها نگهداری می شود راحت تر کنترل می شوند.
- دستگاه را از نظر تنظیم بودن، اتصال درست قطعات متحرک، شکستگی قطعات و یا شرایط دیگری که می تواند منجر به تاثیر گذاشتن بر روی عملکرد آن شود، دائما چک کنید. در صورت آسیب دیدن، پیش از استفاده از ابزار آن را تعمیر کنید، بسیاری از حوادث به علت نگهداری ضعیف و نامناسب ابزار رخ می دهد.
- از ابزار برقی، متعلقات، مته های ابزار و ... ، مطابق با این دستورالعمل ها و در شرایطی که برای این نوع خاص ابزار در نظر گرفته شده است، استفاده کنید. به کار بردن ابزار در شرایطی غیر از شرایط در نظر گرفته شده ، ممکن است به یک وضعیت خطرناک منجر شود.

سرویس

■ ابزار خود را برای تعمیر به یک تعمیر کار واجد شرایط بسپارید تا از قطعات یدکی یکسان با اصل آن استفاده کنند، این کار ایمنی ابزار برقی را تضمین می کند.

هشدارهای ایمنی مربوط به سنبلاده لرزان

■ از این دستگاه فقط برای سنبلاده زدن سطوح خشک استفاده نمایید، زیرا نفوذ آب به داخل دستگاه خطر برق گرفتگی را افزایش می دهد.

■ مواد اشتعال زا را از محیط دور نموده و اطمینان یابید که در محیط کار، هیچ فردی در معرض خطر پرتاب جرقه قرار ندارد. یادآور می شود که جرقه ها در زمان سنبلاده زدن فلزها ایجاد می شود.

هشدار: خطر آتش سوزی!

از گرم شدن بیش از اندازه دستگاه و قطعه ای که بر روی آن کار می کنید جلوگیری نمایید. همواره پیش از اینکه دست از کار بکشید کیسه گردوغبار را تخلیه کنید، زیرا گردو خاک حاصل از سنبلاده زدن که در کیسه و یا فیلتر دستگاه جمع می شود ممکن است تحت شرایط خاص (برای مثال زمانی که جرقه های حاصل از سنبلاده زدن فلز به گردو خاک برخورد کند) به طور خودبخود دچار آتش سوزی شود. این خطر، در صورتی که گردوغبار با رنگ و پلی اورتان و یا دیگر مواد شیمیایی ترکیب شده و یا قطعه ای که بر روی آن کار می شود در اثر سنبلاده زدن طولانی مدت داغ شود، افزایش می یابد.

■ به طور منظم، دریچه های هوای دستگاه را تمیز کنید، زیرا ممکن است فن موتور گردو خاک را به داخل محفظه کشیده و تجمع بیش از حد ذرات فلزی منجر به خطر برق گرفتگی گردد.

مشخصات محصول

تمامی دستورالعمل های ایمنی و عمومی را به دقت مطالعه نمایید.
عدم به کارگیری دستورات ایمنی ممکن است منجر به بروز خطر برق گرفتگی، آتش سوزی و یا جراحات جدی شود. لطفا تمامی دستورات مندرج در این دفترچه را به کارگیرید.

موارد استفاده

این دستگاه، به منظور سنباده زدن خشک چوب، پلاستیک، فلز و سطوح دارای پوشش لاک می مورد استفاده قرار می گیرد. دستگاه های دارای کنترل الکترونیکی همچنین می توانند برای پولیش و صیقل دادن نیز استفاده شوند.

مونتاز

هشدار! پیش از انجام هرگونه تنظیماتی بر روی دستگاه، دوشاخه را از پریز خارج نمایید.

انتخاب ورق سنباده

با توجه به جنس سطحی که بر روی آن کار می کنید، ورق های سنباده متنوعی موجود است.

تعویض ورق سنباده

برای جدا کردن ورق سنباده، ابتدا اهرم کناری را بلند کرده و ورق سنباده را از پد جدا کنید، پیش از نصب ورق جدید، سطح پد دستگاه را از گردوغبار پاک کنید. ورق جدید را در قسمت زیرین پد محکم کرده و اهرم را در جای خود محکم کنید.
برای اطمینان از خروج کامل گردو خاک، دقت نمایید که قسمت های پانچ شده ورق سنباده، دقیقاً بر روی حفره های پد سنباده قرار بگیرند.

با توجه به نوع کار، دستگاه می تواند با پدهای متنوع با سختی متفاوت مورد استفاده قرار گیرد:

- پد سنباده بسیار نرم: مناسب برای پولیش کردن حتی بر روی سطوح خمیده
- پد سنباده متوسط: مناسب برای کلیه امور سنباده زنی، کاربرد عمومی
- پد سنباده سخت: مناسب برای سنباده زنی سخت بر روی سطوح صاف

تغییر پد سناده

توجه! پدهای آسیب دیده را سریعاً تعویض نمایید.
ورق سناده و یا ابزار پولیش را از دستگاه جدا کنید، پیچ ها را کاملاً باز کرده و پد را بردارید، پد سناده زنی جدید را نصب کرده و پیچ ها را محکم نمایید.
توجه: به هنگام نصب پد سناده، اطمینان یابید که لبه های آن به خوبی در کناره های دستگاه جا گرفته است.
توجه نمایید که پدهای آسیب دیده فقط باید توسط مراکز مجاز خدمات پس از فروش زیمبرگ تعویض شوند.

استخراج گرد و غبار

گردو خاک ناشی از موادی همچون رنگ های سربی، برخی از انواع چوب، مواد معدنی و فلزات، می تواند برای سلامتی انسان مضر باشد، لمس این گرد و خاک و یا تنفس آن ممکن است سبب ایجاد آلرژی و یا بیماری های تنفسی در کاربر و یا افراد مجاور گردد. برخی از گردو خاک ها همچون گردو خاک بلوط و راش، به ویژه در تماس با افزودنی های چوب (کرومات، نگهدارنده چوب) ، جزء مواد سرطانزا دسته بندی شده اند. مواد دارای آزرست باید تنها توسط متخصصان مورد استفاده قرار گیرند.
در صورت امکان از سیستم استخراج گردو خاک متناسب با مواد مورد استفاده، استفاده نمایید.
تهویه مناسب در محیط کار فراهم کنید.
توصیه می شود که از ماسک تنفسی کلاس P۲ استفاده نمایید.
در زمان استفاد از مواد، قوانین وضع شده در رابطه با آن را رعایت نمایید.

عملکرد

روشن/ خاموش کردن دستگاه

اطمینان یابید که بدون رها کردن دسته، قادر هستید که دکمه روشن/ خاموش را فشار دهید.
برای روشن کردن دستگاه، دکمه را به سمت وضعیت I فشار داده و متمایل کنید.
برای خاموش کردن دستگاه، دکمه را به سمت وضعیت O فشار دهید.

نگهداری و سرویس


- پیش از انجام هر گونه تنظیماتی بر روی ابزار برقی، دوشاخه را از پریز خارج نمایید.
- برای اطمینان از عملکرد ایمن و مطمئن، همواره دستگاه و دریچه های آن را تمیز نگه دارید.
- چنانچه نیاز است کابل دستگاه تعویض شود، به منظور اجتناب از خطرات ایمنی، این امر باید توسط شرکت زیمرگ و یا مراکز مجاز خدمات پس از فروش آن انجام گیرد.

مشخصات فنی دستگاه	
PZO-5326	مدل
۲۲۰ ولت	ولتاژ
۵۰ هرتز	فرکانس
۲۶۰ وات	قدرت
۱۴۰۰۰ دور در دقیقه	سرعت حرکت در حال آزاد
۱۱۰ در ۱۰۰ میلیمتر	اندازه صفحه سمباده
۱.۲۸ کیلوگرم	وزن

لوازم جانبی:

۳ عدد ورقه سمباده ۱۲۰ م.م، ۱۵۰ م.م و ۱۸۰ م.م

نقشه انفجاری دستگاه

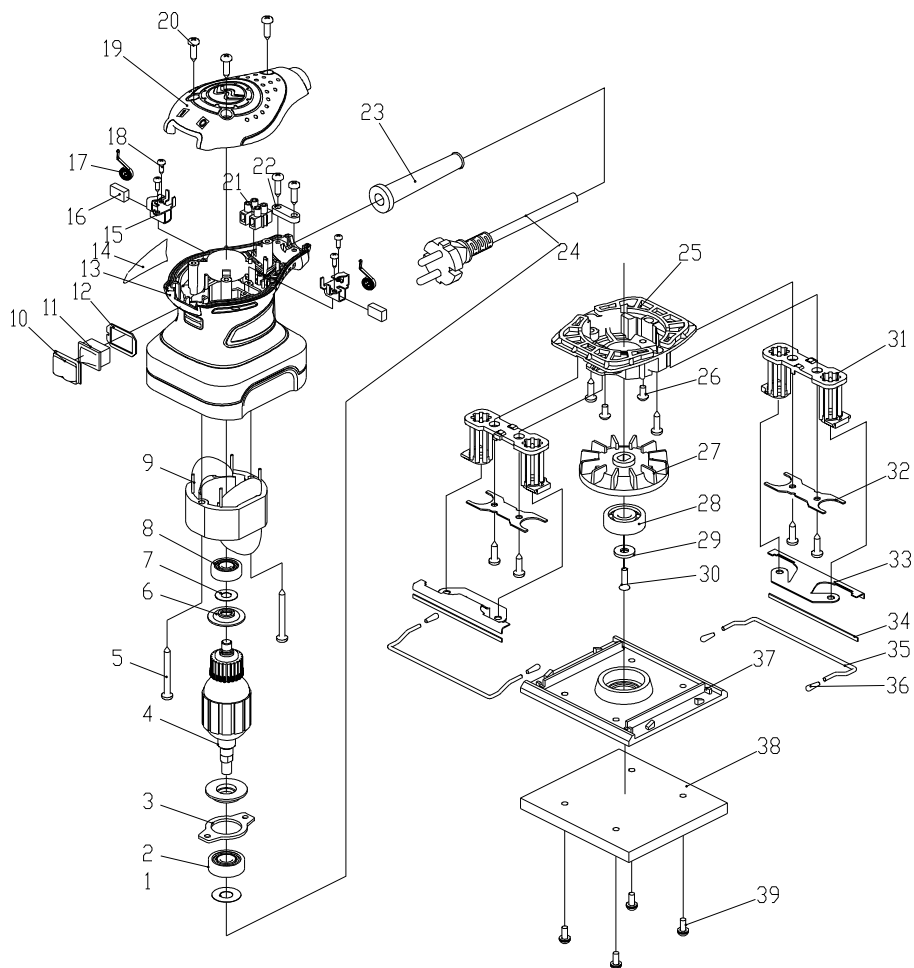

جدول لیست قطعات دستگاه

۲۴	کابل
۲۵	فلنج
۲۶	پیچ $8 \times M4$
۲۷	فن
۲۸	بلبرینگ ۶۲۰۰
۲۹	واشر $5 \times 13 \times 2$
۳۰	پیچ $ST 4 \times 16$
۳۱	پایه پلاستیکی سمباده
۳۲	بست پایه
۳۳	تیغه گیره کاغذ
۳۴	آستین گیره فولادی
۳۵	میله ی قفل کن کاغذ
۳۶	کاور میله
۳۷	صفحه فلزی بیس
۳۸	کفی اسفنجی
۳۹	پیچ $12 \times M4$

نام قطعه	
۱	واشر $9 \times 16,8 \times 0,3$
۲	بلبرینگ ۶۲۹
۳	بست بلبرینگ
۴	آرمیچر
۵	پیچ $ST 4 \times 35$
۶	گردگیر بلبرینگ
۷	واشر
۸	بلبرینگ ۶۲۷
۹	بالشتک
۱۰	عایق کلید
۱۱	کلید
۱۲	بست کلید
۱۳	پوسته بالشتک
۱۴	لیبل
۱۵	جا زغالی
۱۶	زغال
۱۷	فنر جا زغالی
۱۸	پیچ $ST 3 \times 8$
۱۹	کاور بالایی
۲۰	پیچ $ST 4 \times 16$
۲۱	ترمینال سیم
۲۲	بست کابل
۲۳	ته کابل

شرایط گارانتی

ابزار آلات برقی زیمبرگ به مدت ۱۲ ماه، طبق شرایط در نظر گرفته شده در کارت گارانتی، توسط مرکز خدمات مشتریان شرکت، گارانتی شده اند. تمام اجزای دستگاه، به غیر از لوازم جانبی و قطعات مصرفی، یکبار در طول مدت گارانتی، توسط مراکز مجاز خدمات پس از فروش پذیرفته می شوند. به منظور تخصصی سازی در تعمیر ابزارآلات برقی، از مشتریان دعوت می شود تا از دفاتر خدمات مجاز ارائه شده در وب سایت شرکت، در زمینه عیب یابی دستگاه، استفاده نمایند. در صورت استفاده نادرست از دستگاه، تعمیر آن توسط افراد غیرمجاز، پوسیدگی و فرسودگی طبیعی، خرابی دستگاه ناشی از نوسانات برق، استفاده از لوازم جانبی غیر استاندارد، شکستگی، آسیب رسیدن به کارت گارانتی و یا نبود تاریخ یا مهر فروشنده، دستگاه شامل گارانتی نمی شود. با توجه به تعهد برند زیمبرگ به مشتریان، بانک کاملی از قطعات یدکی در مراکز خدمات شرکت موجود می باشد و پس از اتمام مدت گارانتی، تعمیرات توسط نمایندگی های خدمات شرکت انجام می شود. برای اطلاع از آدرس و شماره تماس دفاتر خدمات شهرستانها، به وب سایت شرکت مراجعه نموده و یا با شماره سراسری و رایگان ۹۰۰۰۸۰۰۹ تماس بگیرید.

Warranty conditions

For the period stated in the warranty card - 12 months - Zimberg power tools are guaranteed by the company's customer service. All components of the device, except accessories and consumable parts, are accepted for warranty service once during the warranty period. Due to the specialization in the repair of the power tools in the field of parts identification and troubleshooting of the device, consumers are invited to use the authorized workshops presented on the company's website. This guarantee is invalidated if the device is left to unauthorized repairs, improper use, natural wear and tear, damage to the guarantee card, damage due to power fluctuations, use of non-standard accessories, breakage or absence of the date or the stamp of the seller. As a result of Zimberg's commitment to customers, the complete bank of spare parts is available in the service centers, and after the warranty period expires, the repair is performed by the company's service representatives. For more information about the contact details and address of the company's Authorized Service Centers, please visit our website ZIMBERGCO.COM or call free telephone No " 90008009"

Part List

No	Parts Name
1	flat washer Φ9*Φ16.8*0.3
2	bearing 629RS
3	bearing flange
4	rotor
5	tapping screw ST4*35
6	creepage circle
7	flat washer
8	bearing 627RS
9	stator
10	dustproof sleeve
11	switch
12	baffle plate
13	housing
14	trademarks
15	brush holder
16	carbon brush
17	coil spring
18	tapping screw ST3*8
19	upper cover
20	tapping screw ST4*16
21	terminal
22	cable clip

23	cable guard
24	cable
25	middle cover
26	screw M4*8
27	eccentric
28	bearing 6200RS
29	flat washer Φ5*Φ13*2
30	tapping screw ST4*16
31	leg
32	leg clamp
33	steel clamp
34	steel clamp sleeve
35	lever
36	lever sleever
37	base
38	spongy cushion

Specification	
Model	PZO-5326
Voltage	220 V
Frequency	50 Hz
Power	260 W
No-load speed	14000 r/min
Cushion Size	100*110 mm
Weight	1.28 Kg

Accessories:

Sanding Paper:


120mm

150mm

180mm

-each 1 PC

Explosion Map

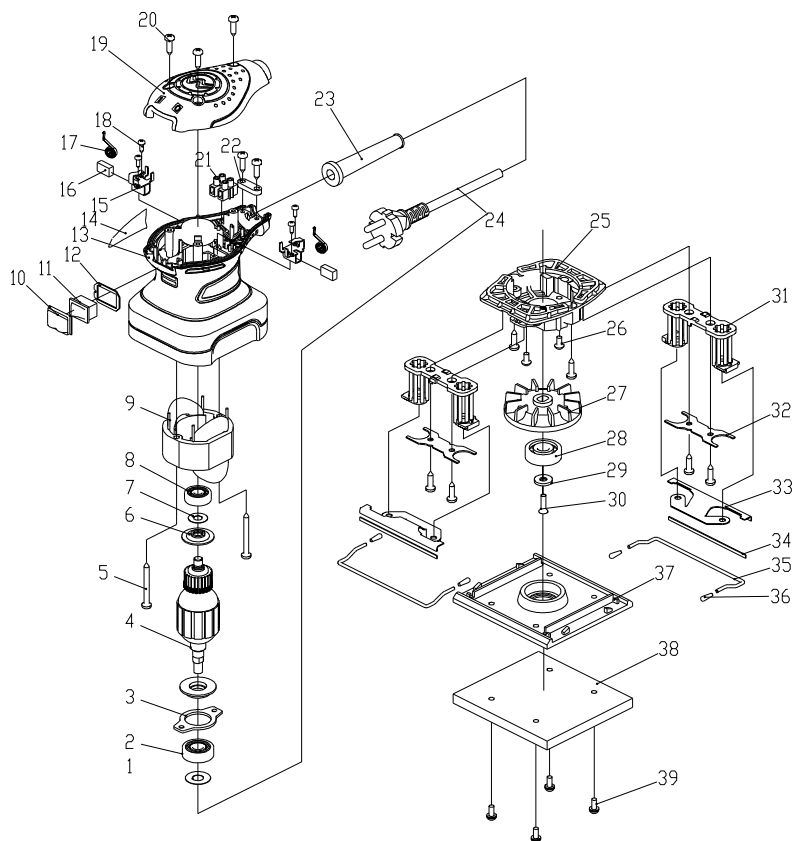

Dust/chip extraction

The dust from materials such as lead paint, some types of wood, minerals and metal can be harmful to human health. Touching or breathing in this dust can trigger allergic reactions and/or cause respiratory illnesses in the user or in people in the near vicinity. Certain dusts, such as oak or beech dust, are classified as carcinogenic, especially in conjunction with wood treatment additives (chromate, wood preservative). Materials containing asbestos may only be machined by specialists.

- Use a dust extraction system that is suitable for the material wherever possible.
 - Provide good ventilation at the workplace.
 - It is advisable to wear a P2 filter class breathing mask.
- The regulations on the material being machined that apply in the country of use must be observed.

Operation

Switching On/Off

Make sure that you are able to press the On/Off switch without releasing the handle.

- To switch on the power tool, tilt the on/off switch (1) toward the right to the "I" position.
- To switch off the power tool, tilt the on/off switch (1) toward the left to the "O" position.

Maintenance and Service

- Pull the plug out of the socket before carrying out any work on the power tool.
- To ensure safe and efficient operation, always keep the power tool and the ventilation slots clean.
- In order to avoid safety hazards, if the power supply cord needs to be replaced, this must be done by ZIMBERG or by a customer service centre that is authorized to repair ZIMBERG power tools

Different sanding sheets are available, depending on the material you are working with and the required surface removal rate:

Changing the sanding sheet

To remove the sanding sheet, lift it from the side and pull it from the sanding pad. Remove dirt and dust from the sanding pad, e.g. With a paintbrush, before attaching a new sanding sheet. Press the sanding sheet firmly onto the underside of the sanding pad.

To ensure optimum dust extraction, make sure that the punched holes in the sanding sheet are aligned with the drilled holes in the sanding pad.

Selection of the Sanding Plate

The power tool can be fitted with sanding pads of various hardness, depending on the application:

- Extra soft sanding pad: Suitable for polishing and sensitive sanding, even on curved surfaces.
- Medium hard sanding pad: Suitable for all sanding work, universal application.
- Hard sanding pad: Suitable for heavy sanding on flat surfaces.

Changing the sanding pad

Note: Replace damaged sanding pads (5) immediately. Remove the sanding sheet or polishing tool. Unscrew the four screws completely (7) and remove the sanding pad (5). Attach the new sanding pad (5) and retighten the screws.

Note: When attaching the sanding pad, make sure that the teeth of the catch mate with the recesses in the sanding pad.

Note: Damaged sanding pads must only be replaced by an after-sales service centre authorized to work with ZIMBERG power tools.

Safety Warnings for Sander

- Only use the power tool for dry sanding. Water entering a power tool will increase the risk of electric shock.
 - Ensure that no persons are at risk due to flying sparks. Remove combustible materials from the surrounding area. Flying sparks are created when sanding metals.
- Warning: Danger of fire!

Avoid overheating the work piece and the sander. Always empty the dust collector before taking a break from work. Sanding dust in the dust bag, micro filter, paper bag (or in the filter bag or vacuum cleaner filter) can spontaneously combust under certain conditions, for example if flying sparks are created when sanding metals. This risk is increased if the sanding dust is mixed with paint or polyurethane residue or with other chemical substances and if the work piece is hot as a result of prolonged work.

- Clean the air vents on your power tool regularly. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.

Product description and specifications

Read all the safety and general instructions.

Failure to observe the safety and general instructions may result in electric shock, fire and/or serious injury. Please observe the illustrations at the beginning of this operating manual.

Intended Use

The power tool is intended for dry sanding of wood, plastic, metal, filler and varnished surfaces. Power tools with electronic control are also suitable for polishing.

Assembly

Pull the plug out of the socket before carrying out any work on the power tool.

Selecting the Sanding Sheet

- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- 19) Store idle power tool out of the reach children and do not allow persons unfamiliar with the power tool of these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to stick and are easier to control.
- Check for misalignment or sticking of moving parts, breakage of parts and other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from

Service

- Have your power tool serviced by qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in.
Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hand hat, or hearing protection used whenever conditions require will reduce personal injuries. Ordinary eye or sun-glasses are NOT eye protection.

Power tool use and care

- Use clamps or other practical way to secure and support the work piece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.
- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate of which it was designed

Read and follow all safety precautions in instruction manual.

GENERAL SAFETY RULES

WARNING:

Read and understand all instruction. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

Work Area

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electric safety

- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord marked «W-A» or «W». These cords are rated for outdoor use and reduce the risk of electric shock.

List

General safety rules	3
Power tool use and care	4
Service	4
Operation	8
Description and Specification	9
Explosion Map	9
Part List	10

Zimberg After Sales Service



East Azerbaijan	West Azerbaijan	Ardabil	Isfahan
Alborz	Tehran	Chaharmahal and Bakhtiari	South Khorasan
Razavi Khorasan	North Khorasan	Khuzestan	Zanzan
Semnan	Sistan and Baluchestan	Fars	Ghazvin
Ghom	Kordestan	Kerman	Kermanshah
Kohgiluyeh and Boyer-Ahmad	Golestan	Gilan	Lorestan
Mazandaran	Markazi	Hamedan	Yazd

For more information about the contact details and address of the company's Authorized Service Centers, please visit our website ZIMBERGCO.COM or call free telephone No.90008009

[ZIMBERG]



[GREAT EXPERIENCE, GREAT WORKS]



 [zimbergco.com](https://www.zimbergco.com)

 [zimberg.co](mailto:info@zimbergco.com)

 info@zimbergco.com

 90008009

[ZIMBERG]



Orbital Sander
260W
PZO-5326