

زیمیرگ



دستگاه تخریب ۷ کیلویی
۹۵۰ وات
مدل ۹۰۰۷



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 zimberg.co

 info@zimbergco.com

 ٩...٨...٩

خدمات پس از فروش زیمبرگ



اصفهان

اردبیل

آذربایجان غربی

آذربایجان شرقی

خراسان جنوبی

چهارمحال و بختیاری

تهران

البرز

زنجان

خوزستان

خراسان شمالی

خراسان رضوی

قزوین

فارس

سیستان و بلوچستان

سمنان

کرمانشاه

کرمان

کردستان

قم

لرستان

گیلان

گلستان

کهگیلویه و بویراحمد

یزد

همدان

مرکزی

مازندران

برای اطلاع از آدرس و شماره تماس دفاتر خدمات شهرستانها، به وب سایت شرکت (ZIMBERGCO.COM) مراجعه نموده و یا با شماره سراسری و رایگان ۹۰۰۰۸۰۰۹ تماس بگیرید.

[ZIMBERG]

فهرست مطالب

۳	کاربرد مناسب
۳	نکات ایمنی
۴	راهنمای قسمت های مختلف
۸	مشخصات فنی
۹	نقشه انفجاری
۱۰	لیست قطعات

کاربرد مناسب

این دستگاه جهت تخریب سطوح بتنی، آجری و صخره‌ها می‌باشد. اقلام جانبی جهت بهبود کارکرد دستگاه:

- سرپوش محافظ گرد و غبار
- دسته‌ی ضدلرزش و ضدتعیق
- دسته‌ی کمکی

نکات ایمنی

- ◀ لطفاً پیش از شروع کار با دستگاه، این دفترچه راهنما را به طور کامل مطالعه نمایید.
- ◀ اگر اشکال یا نارسایی در کابل برق مشاهده می‌کنید، سریعاً دستگاه را خاموش کرده و از برق بکشید.
- ◀ همواره هنگام استفاده از دستگاه، از عینک ایمنی، دستکش و کفش ایمن استفاده کنید و جهت محافظت از شنوایی، از محافظ گوش بهره ببرید.
- ◀ از قرار دادن دستگاه در معرض باران اجتناب کنید. همچنین از کار با دستگاه در محیط‌های مرطوب و فاقد روشنایی کافی، خودداری کنید.

چند نکته


- ◀ پیش از زدن دستگاه به برق، از خاموش بودن کلید آن اطمینان حاصل نمایید.
- ◀ پس از هر بار استفاده، دستگاه را خاموش کرده و از برق جدا نمایید.
- ◀ در هنگام کار، همواره توجه کنید که کابل دستگاه، در پشت آن قرار گرفته باشد. دستگاه را به وسیله‌ی کابل جابجا یا روی زمین نکشید.
- ◀ در هنگام کار با دستگاه، آن را محکم و با هر دو دست، نگه دارید و از تحرک اضافی خودداری نمایید.
- ◀ در هنگام تعویض قلم یا سایر وسایل جانبی و یا تعمیرات، حتماً کابل دستگاه را از برق جدا نمایید.
- ◀ افراد زیر ۱۸ سال، اجازه‌ی کار با این دستگاه ندارند.
- ◀ دستگاه را دور از دسترس کودکان قرار دهید.
- ◀ برای تعمیرات، همواره از قطعات اصلی استفاده کنید.

پیش از استفاده

- ◀ مراقب سیم‌های پنهان، لوله‌های آب و گاز و همچنین کابل‌های تلفن باشید. لطفاً پیش از اقدام به تخریب سطح، محیط کار را به‌طور کامل بررسی نمایید.
- ◀ استفاده از ولتاژ مناسب:
- ◀ ولتاژ قدرت برق باید مطابق با مقدار توصیه شده روی برچسب دستگاه باشد.
- ◀ این دستگاه برای ولتاژ ۲۲۰ ولت طراحی شده است.


الف/ راهنمای قسمت‌های مختلف

هشدار: پیش از نصب متعلقات جانبی، مطمئن شوید که دستگاه خاموش است و کابل برق را نیز جدا کنید. جهت آشنایی با قسمت‌های مختلف دستگاه، از راهنمای زیر بهره ببرید.

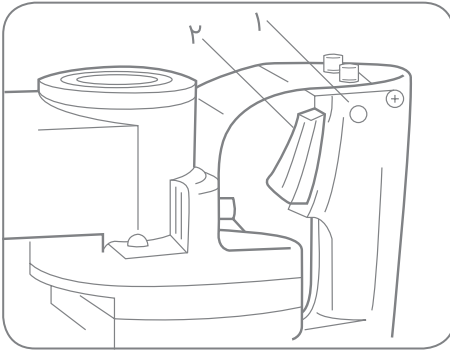


۱/ قفل‌کن کلید


۲/ کلید روشن/خاموش

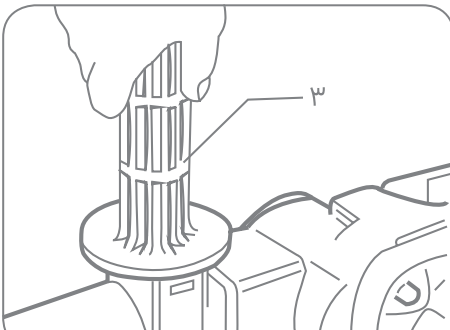


۳/ دسته‌ی کمکی

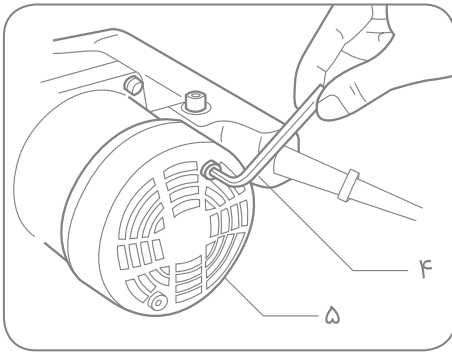

۴ / آچار مخصوص
۵ / ته پوسته (محافظ پشتی)

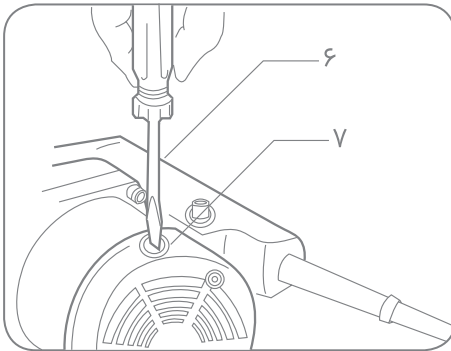

۶ / پیچ گوشتی
۷ / درب جازغالی

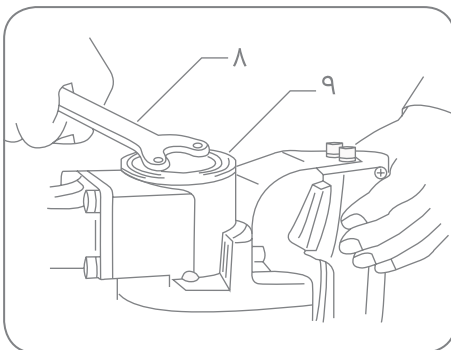

۸ / آچار مخصوص
۹ / درب گریس

هشدار

پیش از اتصال دستگاه به برق، مطمئن شوید دستگاه خاموش است. جهت روشن نگاه داشتن دستگاه، از بستن نوار چسب یا بند به روی کلید، خودداری کنید.

د/ تخریب یا سوراخ کاری

دستگاه را محکم و با هر دو دست نگاه دارید و سپس کلید را فشار دهید. در هنگام استفاده، مطمئن شوید که دست‌های خود را روی دسته‌ی مخصوص و مناسب قرار داده تا از هرگونه خروج از کنترل دستگاه، پیشگیری شود. از قرار دادن فشار مضاعف روی دستگاه خودداری کنید، این کار، تأثیری بر افزایش کارکرد دستگاه نداشته و با ایجاد فشار غیرضروری روی قلم، باعث کاهش عمر مفید آن و همچنین قلم‌گیر دستگاه می‌شود و در برخی موارد منجر به شکستن دسته کلید دستگاه می‌شود.

هشدار

ممکن است مقداری روغن یا گریس از قسمت سیلندر دستگاه به بیرون منتشر گردد. لطفاً هربار پیش از شروع کار با دستگاه، این مورد را بررسی کنید و گریس احتمالی را از روی بدنه تمیز نمایید زیرا با ایجاد لغزندگی در سطح کار، ممکن است منجر به حادثه گردد.

ه / احتیاط

اگر مدت زیادی از دستگاه استفاده نکرده‌اید یا اینکه در شرایط هوایی سرد مشغول به کار هستید، ابتدا اجازه دهید دستگاه به مدت ۳ تا ۵ دقیقه به‌طور آزاد کار کند تا گرم شود و از آسیب‌های احتمالی جلوگیری شود.

و/ گریس کاری دستگاه

دستگاه شما از قبل گریس کاری شده و آماده‌ی استفاده است.



زمان مناسب برای گریس کاری


اگر دستگاه به مدت ۵۰ یا ۶۰ ساعت کار کرده یا اینکه احساس می‌کنید قدرت اولیه را از دست داده، زمان تعویض گریس دستگاه است. ابتدا درب مخزن گریس را باز کرده، سپس با مقدار مناسب از گریس توصیه شده، اقدام به پر کردن ۳۰ گرم از گریس نمایید.

هشدار

از تزریق گریس بیش از ۴۰ گرم خودداری نمایید، زیرا کارکرد دستگاه را کاهش می‌دهد. توصیه می‌شود که دنده‌های ابزار را با گریس مناسب چرب نموده و از استفاده از گریس‌های متفرقه خودداری نمایید.

مشخصات فنی	
۹۵۰ وات	قدرت ورودی
۲۲۰ ولت / ۵۰ هرتز	ولتاژ / فرکانس
۳۸۰۰ ضربه در دقیقه	سرعت تخریب
۱۲ ژول	قدرت تخریب
۷ کیلوگرم	وزن
قلم نوک تیز / قلم نوک پهن / دفترچه راهنما / کیف قابل حمل	لوازم جانبی

نقشه انفجاری دستگاه

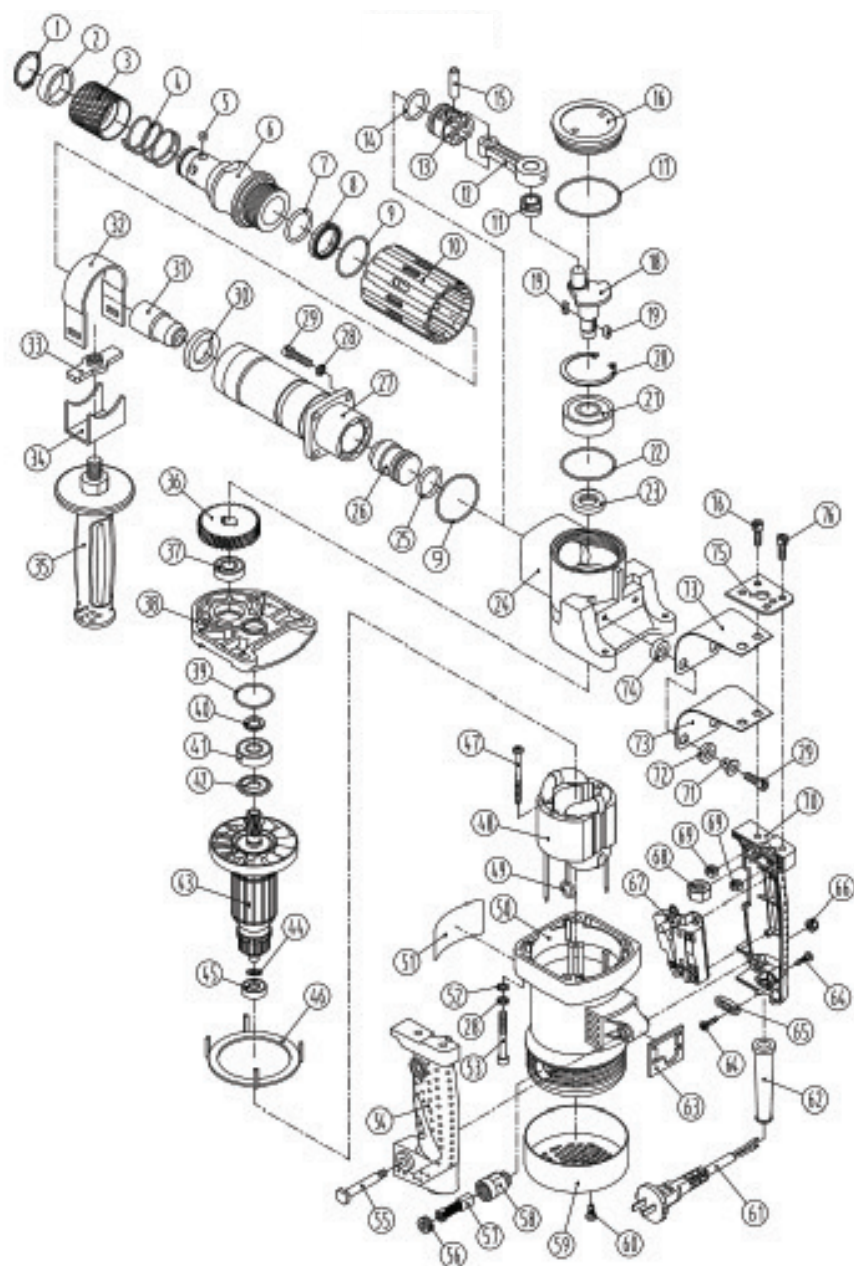

جدول لیست قطعات دستگاه

شماره	نام قطعه
۲۰	خار عینکی $\phi 47$
۲۱	بلبرینگ 6303
۲۲	اورینگ $\phi 46.5 \times \phi 2$
۲۳	کاسه نمد $\phi 17 \times \phi 30 \times 6$
۲۴	گیربگس
۲۵	اورینگ $\phi 23.2 \times \phi 3.5$
۲۶	ضربه زن
۲۷	مخزن سیلندر
۲۸	واشر $\phi 6$
۲۹	پیچ M6X25
۳۰	بوش
۳۱	ضربه زن
۳۲	نگهدارنده
۳۳	پیچ
۳۴	واسط
۳۵	دسته کمکی
۳۶	دنده
۳۷	بلبرینگ 6001
۳۸	فلنج

شماره	نام قطعه
۱	خار عینکی $\phi 28$
۲	بوش $\phi 28.5 \times \phi 36 \times 10$
۳	روکش فلزی
۴	فنر
۵	ساجمه $\phi 8$
۶	مخزن مته
۷	واشر $\phi 27 \times 3.5$
۸	بوش $\phi 28 \times \phi 35 \times 6$
۹	اورینگ $\phi 38 \times \phi 2$
۱۰	روکش
۱۱	رولبرینگ NK1212
۱۲	شاتون
۱۳	پیستون
۱۴	اورینگ پیستون $\phi 23.5 \times \phi 3.5$
۱۵	پین پیستون
۱۶	درب روغن
۱۷	اورینگ $\phi 58 \times 2$
۱۸	میل لنگ
۱۹	خار هلالی 4X4X12

جدول لیست قطعات دستگاه

شماره	نام قطعه
۵۸	جاذغالی
۵۹	ته پوسته
۶۰	پیچ ST5X14
۶۱	کابل
۶۲	ته کابل
۶۳	واشر لاستیکی
۶۴	پیچ ST4X16
۶۵	بست کابل
۶۶	پیچ M6
۶۷	کلید
۶۸	مهره M12
۶۹	مهره M6
۷۰	دسته کلید
۷۱	بوش
۷۲	واشر $\phi 9X\phi 18X3$
۷۳	واسطه
۷۴	واشر لاستیکی $r\phi 9X\phi 18X7$
۷۵	واسطه
۷۶	پیچ M6X18

شماره	نام قطعه
۳۹	اورینگ $m\phi 31.5X\phi 2$
۴۰	بوش $g\phi 12X\phi 18X3$
۴۱	بلبرینگ 6201
۴۲	واشر $g\phi 12.2X\phi 31X2$
۴۳	ارمیچر 0810
۴۴	واشر $\phi 8X\phi 12X1$
۴۵	بلبرینگ 608
۴۶	گردگیر
۴۷	پیچ ST5X60
۴۸	بالشتک
۴۹	فنر جاذغالی
۵۰	پوسته بالشتک
۵۱	لیبل
۵۲	واشر $g\phi 6$
۵۳	پیچ M6X50
۵۴	دسته کلید
۵۵	پیچ دسته
۵۶	درب جاذغالی
۵۷	ذغال

Part List

No.	Name of Parts
39	middle gasket $\phi 31.5 \times \phi 2$
40	gasket $\phi 12 \times \phi 18 \times 3$
41	bearing 6201 CSR
42	gasket $\phi 12.2 \times \phi 31 \times 2$
43	ARMATURE 0810
44	gasket $\phi 8 \times \phi 12 \times 1$
45	bearing 608 SYBS
46	fan shroud
47	cross block screw ST5X60
48	stator
49	tension spring
50	stator shell
51	sticker
52	gasket $\phi 6$
53	six angle cylinder screws M6X50
54	switch handle cover
55	screw
56	brush cover
57	carbon brush


No.	Name of Parts
58	brush holder
59	rear cover
60	cross tapping screw ST5X14
61	cable
62	cable cover
63	gasket
64	cross tapping screw ST4X16
65	Pressing line plate
66	six angle block screws M6
67	switch
68	six angle screws M12
69	six angle screws M6
70	switch handle seat
71	spring cover
72	gasket $\phi 9 \times \phi 18 \times 3$
73	gasket
74	rubber gasket $\phi 9 \times \phi 18 \times 7$
75	pressing iron
76	six angle cylinder screws M6X18

Part List

No.	Name of Parts
1	snap spring $\varnothing 28$
2	gasket $\varnothing 28.5 \times \varnothing 36 \times 10$
3	lock cover
4	back-moving srping
5	steel ball $\varnothing 8$
6	iron head
7	iron head gasket $\varnothing 27 \times 3.5$
8	gasket $\varnothing 28 \times \varnothing 35 \times 6$
9	Ostyle gasket $\varnothing 38 \times \varnothing 2$
10	cylinder cover
11	bearing NK1212
12	connecting rod
13	piston
14	piston ring $\varnothing 23.5 \times \varnothing 3.5$
15	piston pin
16	oil-lid
17	Ostyle gasket $\varnothing 58 \times 2$
18	eccentric shaft
19	square key $4 \times 4 \times 12$

No.	Name of Parts
20	spring $\varnothing 47$
21	bearing 6303 CXISD
22	bearing 6303gasket $\varnothing 46.5 \times \varnothing 2$
23	oil seal $\varnothing 17 \times \varnothing 30 \times 6$
24	gear box
25	gasket $\varnothing 23.2 \times \varnothing 3.5$
26	second pound bit
27	Front cylinder assembly
28	gasket $\varnothing 6$
29	six angle cylinder screws M6X25
30	gasket
31	pound bit
32	Handle hoop
33	screw
34	handle seat
35	front handle
36	gear
37	bearing 6001 SYBS
38	middium cover

Explosion Map

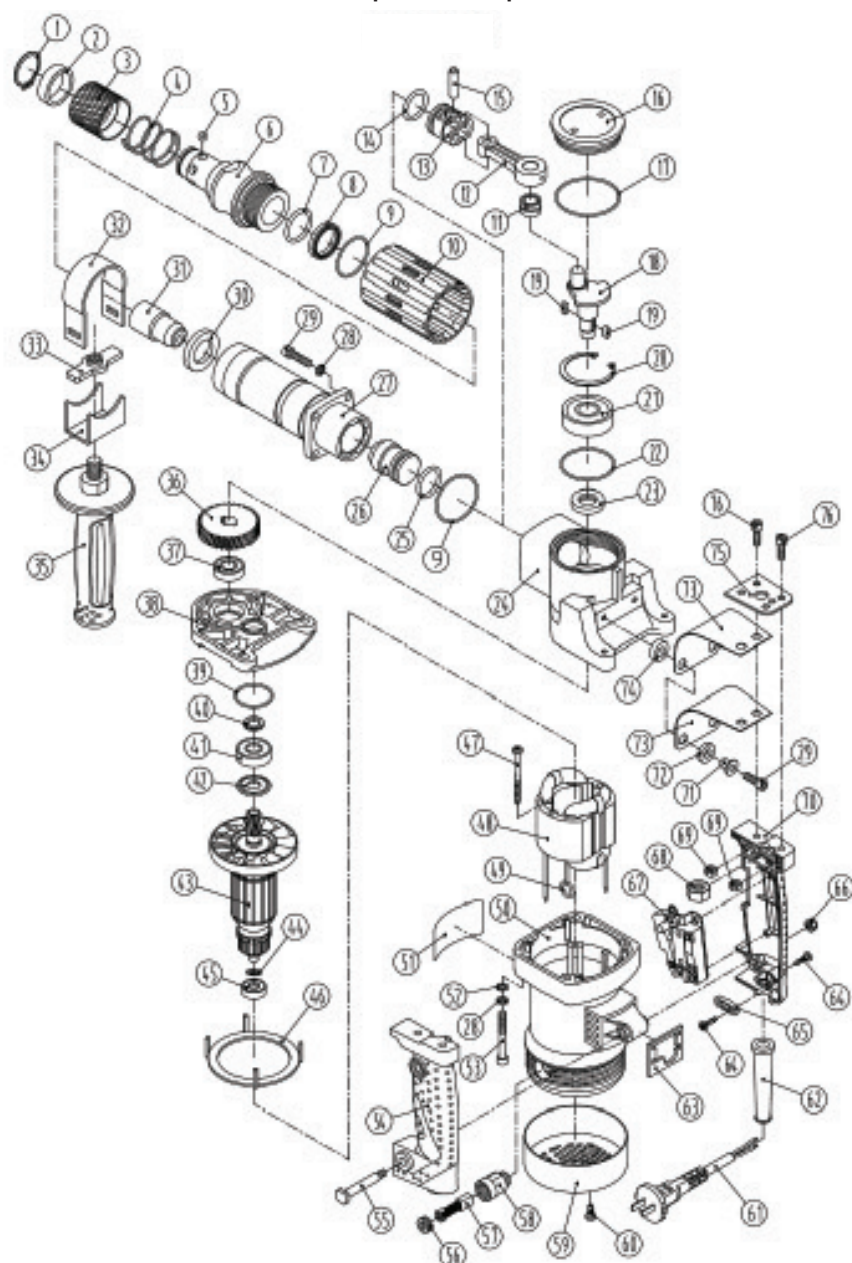

Specifications	
Input power	950 W
Voltage / Frequency	220 V/ 50 Hz
Impact Rate	3800 BPM
Impact Energy	12 j
Weight	7 kg
Accessories	Pointed chisel, Flat chisel, Manual, Carrying Case


Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

20. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.

Such preventive safety measures reduce the risk of starting the power tool accidentally.

21. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

parts of machine

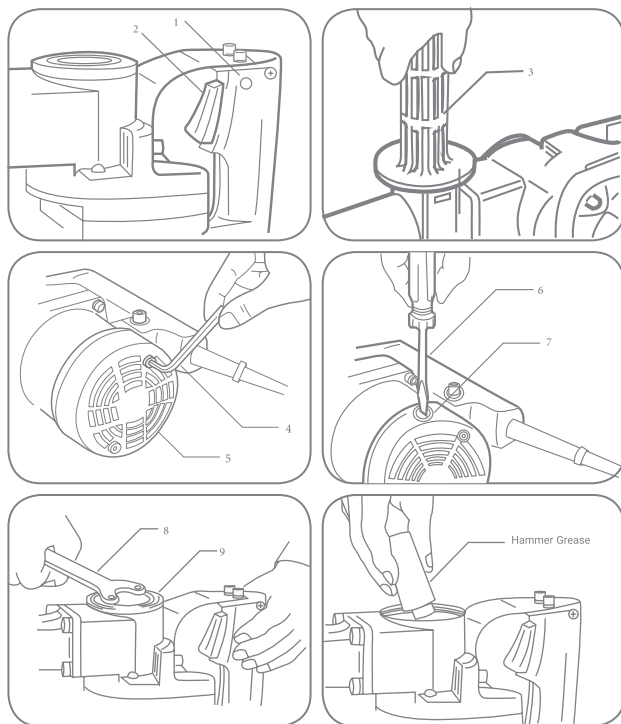

- 1.Lock button
- 2.Switch trigger
- 3.Side grip
- 4.Special wrench
- 5.Rear cover
- 6.Screwdriver
- 7.Brush holder cap
- 8.Lock nut wrench
- 9.Crank cap

5. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.

There is an increased risk of electric shock if your body is earthed or grounded.

6. Do not expose power tools to rain or wet conditions.

Water entering a power tool will increase the risk of electric shock.

7. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

Personal safety

11. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of inattention while operating power tools may result in serious personal injury.

12. Use personal protective equipment. Always wear eye protection.

Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

13. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.

Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.

14. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

15. Do not overreach. Keep proper footing and balance at all times.

This enables better control of the power tool in unexpected situations.

16. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts.

Loose clothes, jewelry or long hair can be caught in moving parts.

17. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.

Use of dust collection can reduce dust-related hazards.

Power tool use and care

18. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

19. Do not use the power tool if the switch does not turn it on and off.

Demolition Hammer

Intended use

The tool is intended for chiseling work in concrete, brick, stone and asphalt as well as for driving and compacting with appropriate accessories.

Power supply

The tool should be connected only to a power supply of the same voltage as indicated on the nameplate, and can only be operated on single-phase AC supply. They are double-insulated in accordance with European Standard and can, therefore, also be used from sockets without earth wire.

General Power Tool Safety

Warnings

WARNING! Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and Instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

1. Keep work area clean and well lit. Cluttered or dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
Electrical safety
4. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

List

Intended Use	3
General PowerTool Safety	3
Parts of Machine	4
Specifications	6
Explosion Map	7
Part List	8

Zimberg After Sales Service



East Azerbaijan	West Azerbaijan	Ardabil	Isfahan
Alborz	Tehran	Chaharmahal and Bakhtiari	South Khorasan
Razavi Khorasan	North Khorasan	Khuzestan	Zanjan
Semnan	Sistan and Baluchestan	Fars	Ghazvin
Ghom	Kordestan	Kerman	Kermanshah
Kohgiluyeh and Boyer-Ahmad	Golestan	Gilan	Lorestan
Mazandaran	Markazi	Hamedan	Yazd

For more information about the contact details and address of the company's Authorized Service Centers, please visit our website ZIMBERGCO.COM or call free telephone No.90008009

[ZIMBERG]



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 [zimberg.co](mailto:info@zimbergco.com)

 info@zimbergco.com

 90008009

[ZIMBERG]



**DEMOLITION
HAMMER
950W
PZD-9007**