

زیمبرگ



کمپرسور بادفندکی
۲ سیلندر

PZC-54 12



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 zimberg.co

 info@zimbergco.com

 ٩...٨...٩

خدمات پس از فروش زیمبرگ



اصفهان

اردبیل

آذربایجان غربی

آذربایجان شرقی

خراسان جنوبی

چهارمحال و بختیاری

تهران

البرز

زنجان

خوزستان

خراسان شمالی

خراسان رضوی

قزوین

فارس

سیستان و بلوچستان

سمنان

کرمانشاه

کرمان

کردستان

قم

لرستان

گیلان

گلستان

کهگیلویه و بویراحمد

یزد

همدان

مرکزی

مازندران

برای اطلاع از آدرس و شماره تماس دفاتر خدمات شهرستانها، به وب سایت شرکت (ZIMBERGCO.COM) مراجعه نموده و یا با شماره سراسری و رایگان ۹۰۰۰۸۰۰۹ تماس بگیرید.

فهرست

۵	دستورالعمل‌های ایمنی
۶	مشخصات محصول
۷	قطعات اصلی
۸	نحوه استفاده
۹	نحوه استفاده از گیره باتری
۱۰	نقشه انفجاری

دستور العمل‌های ایمنی:

۱. قبل از استفاده، اطمینان حاصل کنید که درگاه خروجی از زنگ‌زدگی و آلودگی‌های دیگری پاک است زیرا در این صورت ممکن است منجر به گرم شدن بیش از حد محصول و در نهایت باعث آسیب محصول و یا ایجاد خطرات دیگری شود.

۲. در هنگام پر کردن هوا، اطمینان حاصل کنید که خودرو در وضعیت مطمئنی پارک شده است. موتور را روشن کنید و اطمینان حاصل کنید که توان و ولتاژ باتری خودرو نرمال است تا کمپرسور باد، عملکرد صحیحی داشته باشد.

۳. بعد از اتصال گیره باتری، بررسی کنید که قطب‌های مثبت و منفی هم‌تراز باشند تا از ایجاد حالت‌های غیرعادی در کمپرسور باد جلوگیری شود.

۴. همیشه به فشار تایر توجه کنید و از پر شدن بیش از حد خودداری کنید.

۵. برای طولانی‌تر شدن عمر مفید دستگاه نباید بیشتر از ۱۰ دقیقه به‌طور مداوم از دستگاه استفاده شود.

۶. فشار تایر بر اساس فشار استاتیک است.

۷. در حین کار، باید شیلنگ بدون هیچ‌گونه پیچ‌خوردگی و مانعی باشد، زیرا ممکن است این پیچ‌خوردگی‌ها باعث نمایش فشار بالاتر از حالت عادی در فشارسنج و تخمین نادرست فشار شود.

۸. پوشش خارجی سیلندر از پلاستیک مقاوم در برابر دما و فشار ساخته شده است. هنگام استفاده، به آن دست نزنید.

۹. از قرار دادن پمپ هوا در معرض رطوبت یا مکان‌های قابل اشتعال خودداری کرده و مراقب دستگاه در برابر نور مستقیم خورشید و برخورد اشیاء سنگین باشید. همچنین از بازی کودکان با دستگاه جلوگیری کنید تا دچار آسیب‌دیدگی نشوند.

۱۰. برای تعمیر دستگاه، از افراد متخصص راهنمایی و مشاوره بگیرید و هرگز دستگاه را شخصاً دست‌کاری نکنید.

۱۱. بسته به مدل خودرو و اندازه تایر، پمپ هوای مناسب را انتخاب کنید. این محصول فقط برای مدل‌های خودرو با ولتاژ ۱۲ ولت مناسب است.

مشخصات محصول:


این محصول از دو سیلندر ۳۰ mm برای انجام کار استفاده می‌کند.
۱. مناسب برای خودروهای شخصی و مدل‌های دیگر خودرو با خروجی ۱۲ ولت.

۲. مناسب برای بادکردن انواع لاستیک، اتومبیل سواری، دوچرخه، کامیونت و همچنین انواع توپ ورزشی و وسایل بادکردنی با سوزن و نازل مخصوص

۳. مناسب برای پرکردن لاستیک خودرو در اتوبان، بیابان یا مکان‌های دیگر.

۴. این محصول، مناسب برای پرکردن لاستیک مدل‌های مختلف خودرو است.

۱. لامپ LED
۲. دسته
۳. کلید روشن و خاموش
۴. فشارسنج
۵. شیلنگ و سرشیلنگ
۶. فندکی
۷. سری هوای کوچک
۸. سری هوای بزرگ
۹. فیوز
۱۰. لوله هوا
۱۱. گیره باتری

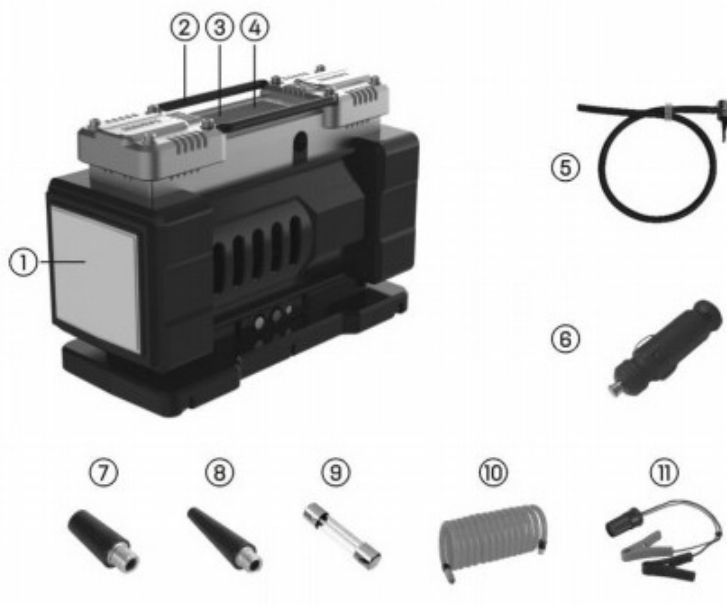

نحوه استفاده

۱. ماشین را در جای مطمئنی پارک کنید و استارت بزنید.
۲. سری فنذکی کمپرسور باد را وارد فنذکی ماشین کنید. قبل از وارد کردن، لطفاً بررسی کنید که جریان حداکثر فنذکی ماشین، به ۱۰ آمپر برسد. اگر جریان ماشین کمتر از ۱۰ آمپر باشد، به جای آن از یک تبدیل گیره باتری مخصوص استفاده کنید!
۳. کمپرسور را با فشردن دکمه "  " روشن و لاستیک وسیله نقلیه را به اندازه لازم باد نمایید. همچنین دقت کنید که فشار لاستیک از مقدار مشخص بالاتر نرود. می‌توانید مقدار باد لاستیک را از درجه کمپرسور روی واحد BAR و PSI ملاحظه کنید.
۴. در صورت تاریک بودن هوا، می‌توانید از دکمه "  " برای روشن کردن چراغ LED استفاده کنید. حالت نور شامل: روشن و چشمک‌زن.
۵. پس از اتمام استفاده، شیلنگ باد را از لاستیک جدا نموده و سری باد لاستیک را به آن بسته و در ادامه سوکت را از فنذکی وسیله نقلیه جدا نمایید.



نحوه استفاده از گیره باتری

۱. ماشین را روشن کنید و آن را در جای مطمئنی پارک کنید. سرپیچ‌های مثبت و منفی تبدیل گیره باتری را به سرپیچ‌های مثبت و منفی باتری خودرو متصل کنید.


۲. سرپیچ کمپرسور هوا را وارد پریز تبدیل کنید.

۳. سوپاپ تایر را وصل کنید.

۴. با استفاده از کلید روشن و خاموش، کمپرسور باد را روشن کنید.


گارانتی

در صورت بروز مشکل، به تعمیرکاران معتبر مراجعه کنید و یا با خدمات پس از فروش زیمربرگ تماس بگیرید.

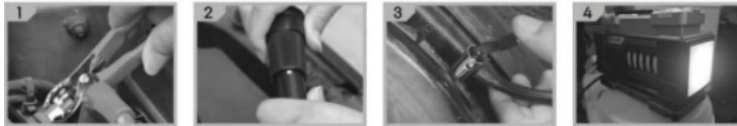

مشخصات	
ولتاژ	۱۲ ولت DC
توان	۲۰۰ وات
سایز سیلندر	۳۰*۲ میلی متر
حداکثر جریان هوا	۴۵ لیتر در دقیقه
سرعت جریان هوا	۳۶ لیتر در دقیقه
حداکثر فشار	۱۵۰PSI
طول شلنگ	۲/۶ متر

نقشه انفجاری دستگاه

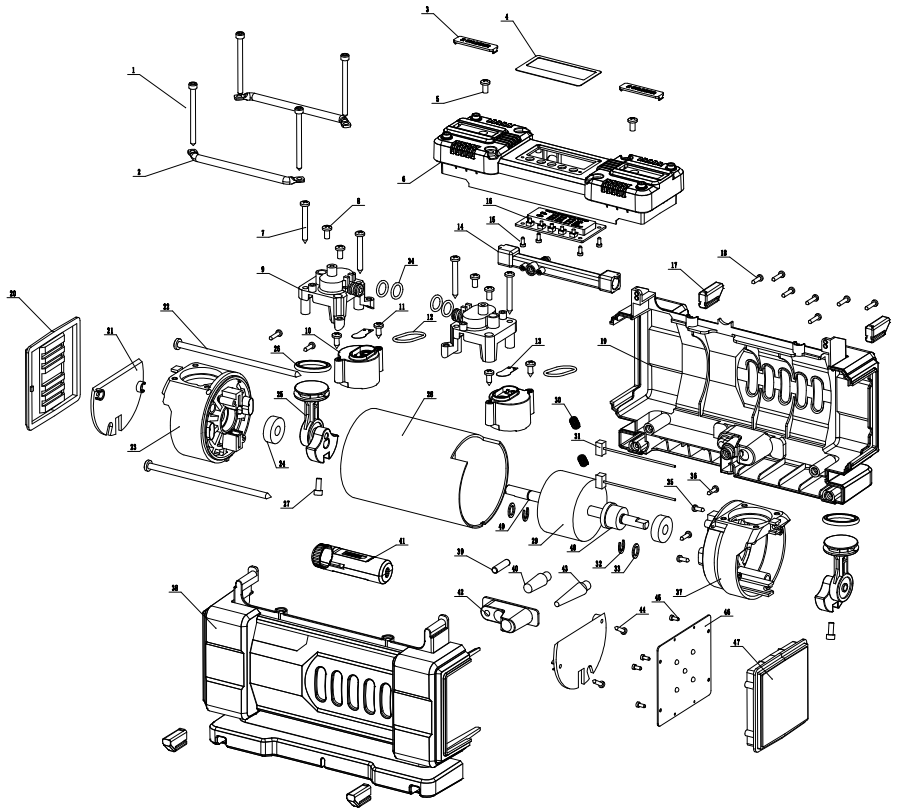

SPECIFICATION PART LIST


CODE	NAME	نام قطعه
2	Handle	دستگیره
3	decorative sheet	مارک
4	Sticker of Guage	پلاک
6	Top Cover	کاور فوقانی
9	Cylinder head Cover	کاور سرسیلندر
14	Connector of Cylinder head	رابط سرسیلندر
16	Digital Gauge	فشارسنج دیجیتال
17	Rubber Feet	پایه لاستیکی
19	Main body right cover	پوسته راست
20	Front Cover	پوسته جلو
21	baffe Cover	درپوش محفظه
24	Bearing	بلبرینگ
25	Piston	پیستون
26	Piston Ring	رینگ پیستون
38	Main body Left cover	پوسته چپ
41	Cigarette Plug	سوکت فندکی
42	Accessories Stoarge	نگهدانه نازلها
46	Light PCB board	برد LED
47	light cover	LED کاور
48	commutator	کولکتور
49	Middle axle	شفت موتور
10.11.12.13	cylinder head	سر سیلندر
28&29	Motor	موتور
37&23	Motor baffe	پوسته موتور

Battery clamp converter instructions

1. Start the car and safely park it. Connect the positive and negative terminals of the battery clip converter to the positive and negative terminals of the car battery.
2. Insert the air pump's cigarette lighter plug into the converter socket.
3. Connect the tire valve.
4. Turn on the power switch of the air pump.

Warranty notice

Within one year from the date of purchase by the user, in the case of failure under normal use. The company provides free warranty, part replacement and other services according to the fault situation.

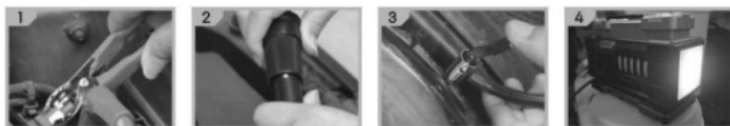


Specification	
Voltage	12V DC
Max Power	200 watt
Cylinder	2*30MM
Max Air flow	45L/MIN
Airflow rate	36L/min
Max Pressure	150PSI
Air hose length	2.6m

Instructions:

1. (Start the engine while the car is in the safe parking state.)
2. (Insert the air pump's cigarette lighter plug into the cigarette lighter socket. Before insertion, please confirm if the maximum current of the cigarette lighter socket reaches 10A. If the car's current is lower than 10A, do not use the cigarette lighter for charging to avoid short-circuiting the car. Please use a dedicated battery clip converter instead!)
3. Take out the product, align the air pump nozzle with the tire valve, press down on the nozzle handle to ensure a secure connection with the valve without any air leakage.
4. Before inflation, please confirm the standard tire pressure values and units for the front/rear tires, and inflate according to the standard tire pressure of the tire.
5. Preset function: Use the unit button to select the desired inflation mode; use the «+» and «-» buttons to adjust to the desired pressure value. After the value flashes three times, click « » to start the pump. When the preset value is reached, the pump will automatically stop.
6. Press the « » button to control the lighting when the power is on. The light mode includes: steady on and blinking.
7. Turn off the car engine, turn counterclockwise to remove the air pump nozzle, and pull the cigarette lighter plug out of the socket.
8. Store the power cord, air hose, and cigarette lighter plug in their designated positions.
9. The product comes with LED lighting, which can be used for illumination during nighttime pressure measurement and inflation by turning on the front lighting.



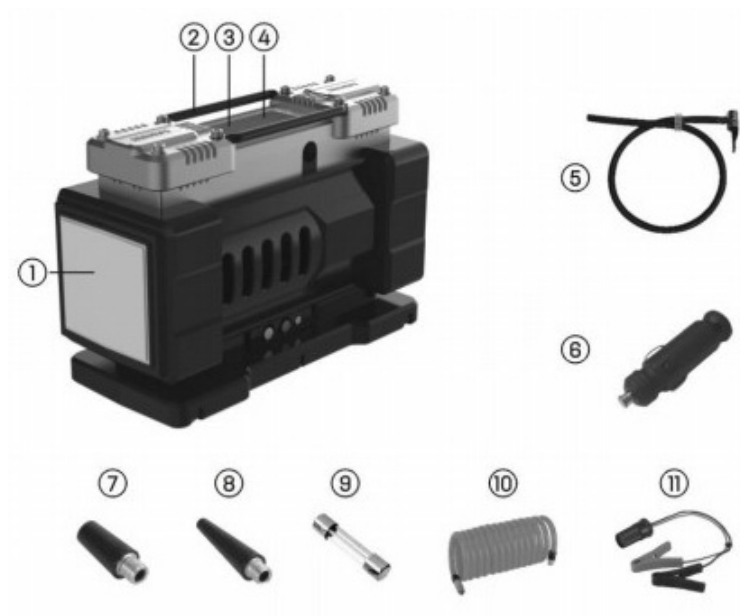

1. LED light
2. Handle
3. Power switch
4. Air Pressure gauge
5. Air nozzle + air hose
6. Cigarette lighter plug
7. Small air nozzle
8. Large air nozzle
9. Fuse
10. Extension air hose
11. Battery clip

7. During operation, the air hose must remain unobstructed without any bends, as bends may cause the pressure gauge to display higher than normal pressure, resulting in inaccurate pressure readings.
8. The cylinder's outer cover is made of temperature-resistant and pressure-resistant engineering plastic. Do not touch it with your hands during use.
9. Avoid placing the air pump in damp or flammable areas, avoid heavy objects and direct sunlight, and prohibit children from playing with it to prevent injuries.
10. Do not modify the air pump privately, and prohibit non-technical personnel from disassembling and repairing it.
11. Choose the appropriate air pump according to the car model and tire size. This product is not suitable for non-12V voltage car model

Product Description:

This product uses a 30mm dual-cylinder for operation, with large displacement, quick inflation, and wide application range:

1. Suitable for car, commercial vehicle, and other vehicle models with 12V output.
2. Equipped with three accessory nozzles, suitable for bicycles, motorcycles, and other gas containers.
3. Suitable for inflating car tires on highways, in the wilderness, or other locations.
4. The product comes with an extension air hose, making it suitable for inflating tires of various vehicle models.

safety precautions:

1. Before use, check that the output port is free from oxidation and other dirt. Poor conductivity at the output end can cause overheating of the product and power supply, leading to product damage or posing a danger.
2. When inflating, make sure the car is in a safe parking state, start the engine, and ensure that the car battery's power and voltage are normal to ensure the proper operation of the air pump.
3. After connecting the battery clip, check if the positive and negative terminals are aligned to avoid causing a short circuit in the air pump.
4. Pay attention to tire pressure at all times and avoid over-inflation.
5. To prolong the lifespan, continuous usage time should not exceed 10 minutes.
6. Do not dismantle the tire pressure gauge arbitrarily. During operation, the displayed pressure is dynamic pressure. After shutdown, the displayed pressure is static pressure. Tire pressure is based on static pressure.

List

Safety precautions:	5
Product Description:	6
Original parts:	7
Instructions:	8
Battery clamp converter instructions:	9
Specification part list:	10

Zimberg After Sales Service



East Azerbaijan	West Azerbaijan	Ardabil	Isfahan
Alborz	Tehran	Chaharmahal and Bakhtiari	South Khorasan
Razavi Khorasan	North Khorasan	Khuzestan	Zanjan
Semnan	Sistan and Baluchestan	Fars	Ghazvin
Ghom	Kordestan	Kerman	Kermanshah
Kohgiluyeh and Boyer-Ahmad	Golestan	Gilan	Lorestan
Mazandaran	Markazi	Hamedan	Yazd

For more information about the contact details and address of the company's Authorized Service Centers, please visit our website ZIMBERGCO.COM or call free telephone No.90008009



[GREAT EXPERIENCE, GREAT WORKS]



 zimbergco.com

 [zimbergco.co](mailto:info@zimbergco.com)

 info@zimbergco.com

 90008009

[ZIMBERG]



**Dual-Cylinder
Air Compressor
PZC-5412**